


LiveScript

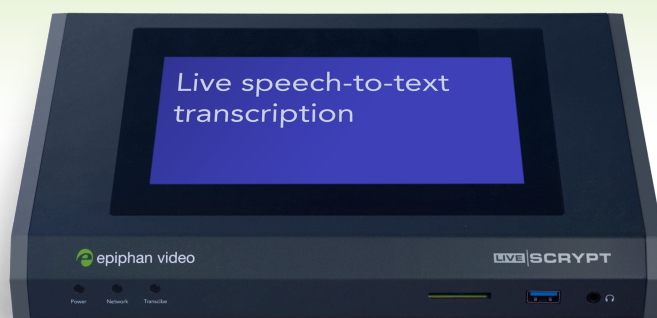

Release 1.0
December 14, 2020

Terms and conditions

This document, the Epiphan web site, and the information contained therein, including but not limited to the text, videos and images as well as Epiphan System Inc.'s trademarks, trade names and logos are the property of Epiphan Systems Inc. and its affiliates and licensors, and are protected from unauthorized copying and dissemination by Canadian copyright law, United States copyright law, trademark law, international conventions and other intellectual property laws.

Epiphan, Epiphan Video, Epiphan Systems, Epiphan Systems Inc., and Epiphan logos are trademarks or registered trademarks of Epiphan Systems Inc., in certain countries. All Epiphan product names and logos are trademarks or registered trademarks of Epiphan. All other company and product names and logos may be trademarks or registered trademarks of their respective owners in certain countries.

Copyright © 2020 Epiphan Systems Inc. All Rights Reserved.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET OR PRODUCT INSTALLATION SOFTWARE PACKAGE THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSES OR LIMITED WARRANTY, CONTACT YOUR EPIPHAN REPRESENTATIVE FOR A COPY.

PRODUCT DESCRIPTIONS AND SPECIFICATIONS REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. EPIPHAN PERIODICALLY ADDS OR UPDATES THE INFORMATION AND DOCUMENTS ON ITS WEB SITE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION AND RECOMMENDATIONS ARE BELIEVED TO BE ACCURATE AT TIME OF WRITING BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

LIMITATION OF LIABILITY

UNDER NO CIRCUMSTANCES SHALL EPIPHAN BE LIABLE FOR ANY INCIDENTAL, SPECIAL, CONSEQUENTIAL, EXEMPLARY OR OTHER INDIRECT DAMAGES THAT RESULT FROM THE USE OF, OR THE INABILITY TO USE, THIS PRODUCT OR THE INFORMATION CONTAINED IN THIS DOCUMENT OR PROVIDED ON EPIPHAN'S WEB SITE, EVEN IF EPIPHAN HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL EPIPHAN'S TOTAL LIABILITY TO YOU FOR ALL DAMAGES, LOSSES, AND CAUSES OF ACTION RESULTING FROM YOUR USE OF THIS PRODUCT, WHETHER IN CONTRACT, TORT (INCLUDING, BUT NOT LIMITED TO, NEGLIGENCE) OR OTHERWISE, EXCEED THE AMOUNTS YOU PAID TO EPIPHAN DURING THE MOST RECENT THREE-MONTH PERIOD IN CONNECTION WITH AMOUNTS WHICH YOU PAID FOR USING THIS PRODUCT.

INFORMATION AND DOCUMENTS, INCLUDING PRODUCT SPECIFICATIONS, PROVIDED IN THIS DOCUMENT OR THE EPIPHAN WEB SITE ARE PROVIDED "AS IS". SPECIFICALLY, BUT NOT WITHOUT LIMITATION, EPIPHAN DOES NOT WARRANT THAT: (i) THE INFORMATION IS CORRECT, ACCURATE, RELIABLE OR COMPLETE; (ii) THE FUNCTIONS CONTAINED ON THE EPIPHAN WEB SITE WILL BE UNINTERRUPTED OR ERROR-FREE; (iii) DEFECTS WILL BE CORRECTED, OR (iv) THIS WEB SITE OR THE SERVER(S) THAT MAKES IT AVAILABLE ARE FREE OF VIRUSES OR OTHER HARMFUL COMPONENTS. EPIPHAN SPECIFICALLY DISCLAIMS ALL REPRESENTATIONS, WARRANTIES, AND CONDITIONS, EITHER EXPRESS, IMPLIED, STATUTORY, BY USAGE OF TRADE OR OTHERWISE INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, TITLE, SATISFACTORY QUALITY OR FITNESS FOR A PARTICULAR PURPOSE.

For additional terms and conditions, please refer to additional sections in this document.

Thank you for choosing Epiphan!

Building reliable solutions that perform above expectations is our mission at Epiphan Video and we value customer feedback. Suggestions for improvement and comments can be sent to: info@epiphan.com

Warranty

Epiphan Video products come with a 100% return to depot warranty for one year from the date of purchase.

Technical support

Epiphan's products are backed by our professional support team. You can reach our team several ways:

- Email support@epiphan.com
- Live chat from our support site <https://www.epiphan.com/support/>
- Phone toll free at 1-877-599-6581 or call +1-613-599-6581

Gather as much information about your problem as you can before you contact us so we can help you better, including:

- A description of the problem
- Details about your audio source (i.e. type and connection)
- Product serial number
- Product firmware version
- Product LED lights

Table of contents

Table of contents	iv
Get started	1
What is LiveScript?	3
User interfaces	4
Using the touch screen	4
Using the web interface	6
Using Epiphan Cloud	7
About your LiveScript device	9
Install the power button shield	11
Create an account and enable transcription services	12
Connect the network and power on	13
Connect audio sources and check levels	14
Optimize audio performance	16
Connect an external display	16
Pair the LiveScript device	18
Start, stop, and pause transcription using the touch screen	20
Start, stop, and pause transcription using Epiphan Cloud	21
Monitor audio	22
Output display options	24
Choose the display view	24
Display QR code	26
Copy the QR code and session URL	28
Change the display output port resolution	29
Change display color scheme and font size	31
Change touch screen font size	32
Change the direction of transcription	34
Transcription options	36
Change the language	36
Enable punctuation and profanity filter	37
Enter an NAICS code	39
Clear transcription from the display	40
Download and delete .SRT and .TXT files	42
Audio options	44
Adjust audio gain	44
Enable or disable phantom power	47
Mute audio	48
Assign audio sources to an input	50

System network options	52
Network ports used by LiveScrip	52
Access system information	53
Rename the LiveScrip device	55
Turn DHCP on or off	57
Set up a static IP address	58
Set the date, time, and zone	60
Setup local NTP or another synchronization server	61
Security options	62
Set touch screen PIN and lock	62
Set the web interface password	64
Billing and storage	65
Managing your account and changing your plan	65
Storage and managing your footage	66
Troubleshooting and support	67
Troubleshooting Quick Reference	68
View network diagnostics	69
Power down and system restart	69
Specifications	71
Audio inputs	71
Vesa mounting the device	72
Tech specs	72
Software license	76

Get started

Welcome and thank you for buying Epiphan LiveScript™. You'll find all the information you need to set up and use your new live transcription solution in this guide.

The **Get started** covers [What is LiveScript?](#) and gives an overview [About your LiveScript device](#), as well as the [User interfaces](#). You'll also find the basic step-by-step procedures you need to get started transcribing right away.

The rest of the guide covers custom options that are available from the LiveScript device settings - like changing the transcription language, displaying a QR code so people can watch using their favorite smart device, changing the font size and the look of the output display, and more.

The guide is divided into these main sections:

- Get started
- Display options
- Transcription options
- Network and system options
- Security options
- Troubleshooting and support
- Billing and storage

Before you begin

To get started, you need your LiveScript transcription device, a LiveScript account, a network connection, and at least one audio source - like a microphone. You can connect one or more audio sources to the LiveScript device. LiveScript even accepts embedded audio from SDI, HDMI, and USB (UVC) video sources.

The better your audio source, the better LiveScript works. To get the best performance out of your LiveScript device, see [Optimize audio performance](#).

Quick steps to start transcribing using your LiveScript device.



Step 1: Set up an Epiphan Cloud account and enable LiveScript transcription service. Valid credit card information is required, see [Create an account and enable transcription services](#).

Step 2: After your account is setup, you should connect the LiveScript device to the network and power up the device, see [Connect the network and power on](#).

Step 3: Next, connect your audio sources and check your levels, see [Connect audio sources and check levels](#).

Step 4: And connect an output display device, see [Connect an external display](#).

Step 5: Pair your LiveScript device to your Epiphan Cloud account, see [Pair the LiveScript device](#).

Step 6: Now you're ready to start transcribing. It's just a simple tap to start, stop, and pause transcription using the touch screen and web interface, see [Start, stop, and pause transcription using the touch screen](#). Or use Epiphan Cloud, see [Start, stop, and pause transcription using Epiphan Cloud](#).

Step 7: When you're done, you can download an .SRT or .TXT file of the transcription, see [Download and delete .SRT and .TXT files](#).

What is LiveScript?

LiveScript is an automated, AI-based live transcription solution for real-time speech-to-text transcription that's perfect for conferences, corporate town halls, medical training, lecture capture, and any live event where greater accessibility is needed.

The LiveScript transcription solution has two main components: a hardware device and an automated cloud-based transcription service.



Highly accurate and affordable, LiveScript supports many languages - making it incredibly versatile.

Watch live transcriptions on in-room displays or from anywhere there's Internet connectivity using your mobile device and favorite web browser. You can even feed the HDMI output to your video production software and chroma key out the background for a transparent lower-third effect.

The convenient 7 inch built-in touch screen lets operators monitor the live transcription, as well as set up options like the profanity filter and automatic punctuation. LiveScript also offers easy-access remote setup options using a web-based UI or Epiphan Cloud.

When your event's done, the transcription is saved to your account in the cloud. You can download the .SRT or .TXT transcription file at any time.

User interfaces


LiveScript has three interfaces you can use to monitor and control live transcription, as well as configure LiveScript options.

- [Using the touch screen](#)
- [Using the web interface](#)
- [Using Epiphan Cloud](#)


Using the touch screen

The LiveScript device's front panel includes a 7 inch touch screen for confidence monitoring, configuration, and operation. Simply tap and swipe to select buttons and navigate menus.


Control icons and a VU meter appear along the bottom of the touch screen, and a header bar with additional buttons and information like the name of the device appears along the top.

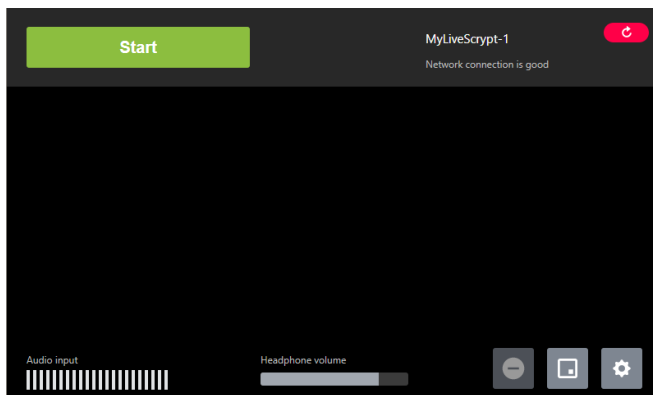

Transcriptions scroll upwards from the bottom of the screen by default. The active phrase is highlighted.

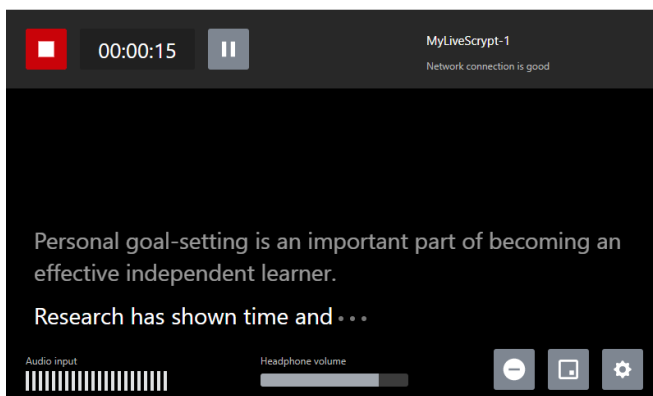

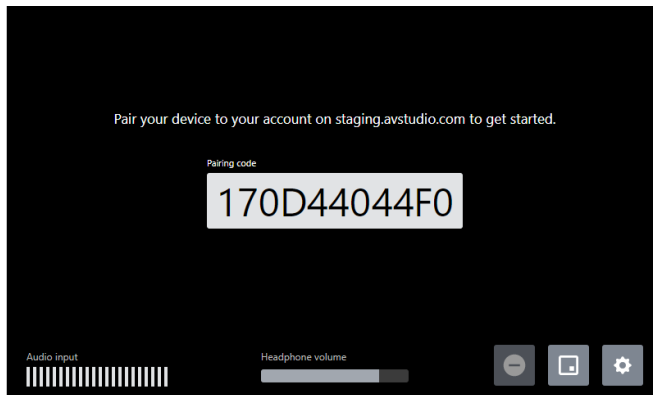

The display area can show the pairing code, transcriptions, menus, the QR code, and messages.



The touch screen is capacitive. Use only your finger or a specially designed soft-tipped capacitive stylus. Pressing too hard or using something other than your fingertip or capacitive stylus can damage the screen.

Table 1 Description of controls and icons

Icon	Description
	Start transcription.
	Stop transcription.
	Pause transcription.
	Restart a paused transcription.
	Clears the transcription from the beginning of the current session. The icon is grayed out when transcription isn't started.
	The transcription timer increments while transcription is in progress and displays time in hh:mm:ss . The time flashes while transcription is paused and reverts to 00:00:00 when transcription is stopped.
	<p>Select the display view that people see. Options are:</p> <ul style="list-style-type: none"> None: A plain black screen with the LiveScript logo displays. Text: The live transcription displays full screen when you start transcription. The transcription appears only as speech is detected. Text + QR: The live transcription displays along with the QR code when you start transcription. The transcription appears only as speech is detected. QR code: A full screen QR code displays when you start transcription.

Icon	Description
	Access the Settings to configure the HDMI output options, audio sources, transcription options, system and network options, and security features.
	Reboot the device. Displays when a software update is available.

A headphone volume slider and VU meter appear along the bottom of the touch screen. For more information, see [Monitor audio](#).

Using the web interface

The web interface is a convenient way for you to remotely monitor, configure, and control your LiveScript device.

All screens and controls are exactly the same as the touch screen. Simply click and drag to scroll through lists and select menus using a computer and mouse. Using a smart device or a touch-sensitive screen, you can tap and swipe.




Throughout this user guide, follow the instructions to use the touch screen unless the instructions specifically indicate there are alternate steps for the web interface. For an overview of icons and controls on the screen, see [Using the touch screen](#).

The IP address of your LiveScript device is needed to use the web interface. As well, the device must be connected to a LAN with access to the Internet. To connect the device to the network, see [Connect the network and power on](#).

To use the web interface with your LiveScript device:

1. Get the IP address of the device. From the touch screen, tap the **Settings** (gear) icon and select **System**. Then scroll to the **Network** section.

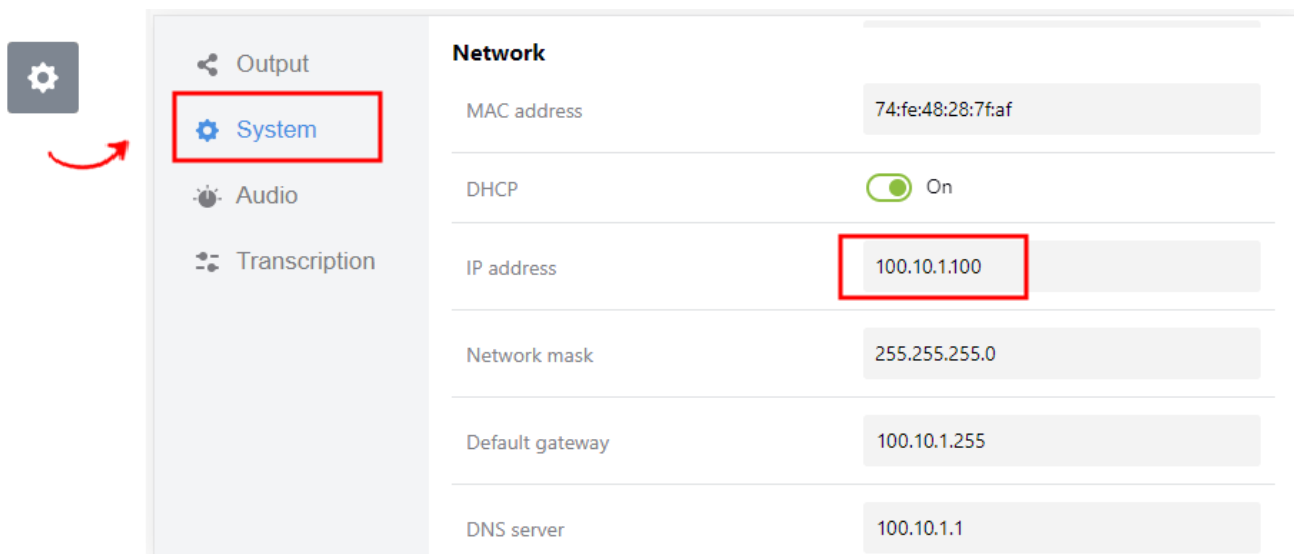

2. Enter the IP address of your device into the address bar of your web browser as follows:

```
http://<IP Address>/admin
```

3. Select **Log In** and that's it. You're in!

Alternatively, you can access the web interface from the **System** menu in Epiphan when you select **Remote Web Admin**, see [Using Epiphan Cloud](#).



If login credentials are configured for your LiveScript device, ask your administrator for the user name and password. See [Set the web interface password](#).

Using Epiphan Cloud

Epiphan Cloud is a cloud-based device management platform that enables remote teams to control, manage, and perform rescue troubleshooting for LiveScript devices, as well as Epiphan Pearl systems. You can set up transcription services, start/stop transcription, and configure your LiveScript device using Epiphan Cloud.

With a free Epiphan Cloud account, you can:

- Setup LiveScript transcription services, billing, and monitor monthly usage, see [Create an account and enable transcription services](#).
- Control transcription for a paired LiveScript device, see [Start, stop, and pause transcription using Epiphan Cloud](#).
- Preview live transcriptions for individual LiveScript devices and monitor the audio VU meter.
- Configure the LiveScript device settings, including: output options, system and network options, audio options, and transcription options.
- Manage archived transcription sessions and download .SRT and .TXT files after the transcription session ends, see [Download and delete .SRT and .TXT files](#).
- Reboot the LiveScript device.
- Access the web interface, see [Access system information](#).
- View health statistics on the Devices Dashboard.
- Pair and unpair devices, as well as delete devices from your team, see [Pair the LiveScript device](#).
 - The LiveScript device's entry in Epiphan Cloud permanently goes offline when you unpair. You must pair the device again to start a new transcription session.
 - If you pair LiveScript again after you have successfully unpaired from Epiphan Cloud, it shows up as a new device in Epiphan Cloud with a new device ID. The previous instance of the device remains permanently offline; however, you can still access transcription .SRT and .TXT files for an offline device instance.



Deleting an offline LiveScript device in Epiphan Cloud removes all transcription files associated with that encoder instance.

The screenshot shows the Epiphan Cloud interface. On the left is a dark sidebar with the 'cloud' logo at the top and several icons below. One icon, representing a device, is highlighted with a red box. A red curved arrow points from this icon to the main content area. The main area has a header '2 LiveScript devices' and a green 'Pair device' button. Below is a table with two rows of device information.

Device ▾	Audio	Transcription	Online
MyLiveScript-1		00:00 Start transcription	
MyLiveScript-2		00:00 Start transcription	

For more information about Epiphan Cloud, see the [Epiphan Cloud online user guide](#).

About your LiveScript device

This section will help you get oriented with your LiveScript device. For the full product specifications, see [Specifications](#)

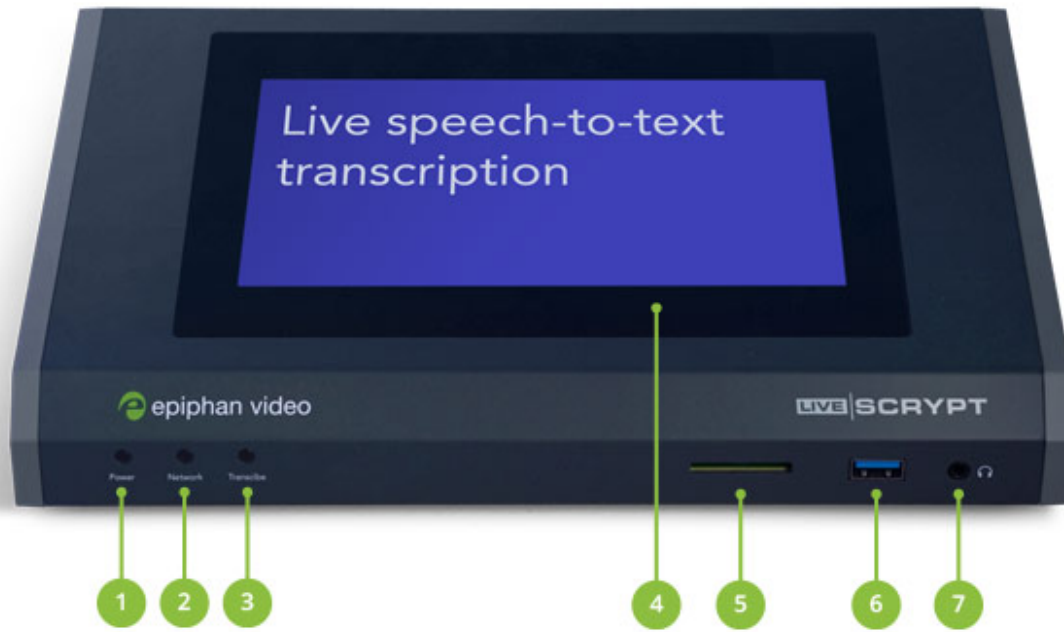


Table 2 LiveScript front panel descriptions

Label	Name	Description
1	Power light	Glows when the LiveScript is powered on.
2	Network light	Glows when the LiveScript has network connectivity.
3	Transcribe light	Glows when LiveScript is transcribing.
4	Touch screen front panel display	Used for confidence monitoring, configuration, and for authentication using a 4-digit PIN (if enabled).
5	SD card slot	Unused
6	USB 3.0 port	Unused. Do not connect a web camera or USB microphone to this port.


Label	Name	Description
7	3.5 mm audio output jack	Audio headphone jack.



Do not insert objects in to the two, pin-sized holes that are located beside the LEDs.



Table 3 LiveScript back panel descriptions

Label	Name	Description
1	Lock	Allows LiveScript to be locked to a desk or surface using a laptop lock cable.
2	Power button	Press to toggle LiveScript on and off. <div> If a software shutdown is performed when the toggle switch is in the on position, double press the power button to turn on LiveScript.</div>
3	Power jack	Plug the power supply in here. The port requires a 12 V DC power source (center-positive). Always use the provided power supply.
4	USB 3.0 ports	Connect a USB web camera (UVC) with embedded audio or a USB (UAC) audio source.
5	HDMI output port	Connect an HDMI monitor or display device, see Connect an external display for details.
6	RJ-45 Ethernet	Auto-sensing gigabit Ethernet 10/100/1000 Base-T network port, see Connect the network and power on .

Label	Name	Description
7	SDI in	Connect up to 3G SDI signals for LiveScript to use the embedded audio.
8	HDMI in	Connect HDMI and DVI signals (using an adapter) for LiveScript to use the embedded audio.
9	RCA audio in	RCA consumer line-level mono audio pair, see Audio inputs .
10	3.5 mm audio in	Stereo plug for mic-level passive or active stereo electret microphones.
11	XLR/TRS combo jacks	Two mono XLR /TRS combo jacks. <ul style="list-style-type: none"> Two XLR mic-level (balanced) Two TRS ¼" professional line-level, +4 dBu (balanced/unbalanced)
12	Phantom power light	<p>Glows when 48 V phantom power is enabled. Phantom power is applied to both XLR audio input ports when enabled, see Enable or disable phantom power.</p> <div> <p>WARNING: CONNECTING DEVICES THAT ARE NOT DESIGNED FOR PHANTOM POWER WHEN PHANTOM POWER IS ENABLED FOR THE TWO XLR PORTS CAN SERIOUSLY DAMAGE THOSE DEVICES. ALWAYS CHECK THE PHANTOM POWER LED BEFORE CONNECTING DEVICES TO THE XLR PORTS.</p> </div>


Install the power button shield

Optionally, you can install the supplied power button shield over the power button to prevent accidentally turning the device off. Once applied, you cannot reposition the power button shield without damaging the adhesive.

Before you begin, clean the area around the power button to remove any dirt or grease.

To install the power button shield:

1. Attach the adhesive to the back of the power button shield. Remove the red adhesive backing and carefully align the lower left corners before pressing firmly.

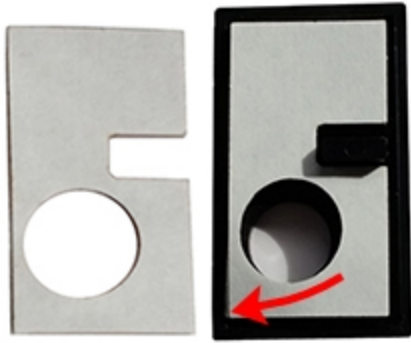

2. Remove the white adhesive backing and align the tab with the laptop lock keyhole to position the power button shield. Make sure the power button is clearly visible through the round hole before pressing firmly.



3. Press the power button to ensure it functions properly.

Create an account and enable transcription services

To use your LiveScript transcription solution, you need an Epiphan Cloud account and a transcription service plan. A valid credit card is required.

Only the Epiphan Cloud account owner can add or modify billing information, plans, and change ownership of the account. A LiveScript plan can be setup for individual teams by the owner of that team.

After your LiveScript transcription service plan is setup, you can pair your LiveScript device to your account and start transcribing, see [Pair the LiveScript device](#).

For the current terms and cost for the LiveScript live transcription service, go to:
www.epiphan.com/products/livescript/

At the time of publishing this guide:

- The cost is \$9.95 USD per transcription hour with a one hour minimum.
- The first five minutes of a transcription session is free. After five minutes, you're billed a minimum of one hour.
- For sessions longer than one hour, additional charges at the rate of \$9.95 USD per transcription hour applies. For example, a session that is 61 minutes long is billed for two transcription hours.

- Your credit card is charged once at the end of the 30-day billing cycle. The billing cycle begins the date credit card information was added to your account to enable the LiveScript transcription service for a team.


To create an account and enable transcription services:

1. Using your web browser, login to Epiphan Cloud at: <https://go.epiphan.cloud>



The first time you login to Epiphan Cloud at go.epiphan.cloud, you can choose to authenticate using either a Facebook account, a Google account, or using an email and password. Your Epiphan Cloud account is associated with your login method, so make sure you login using the same method each time. A new Epiphan Cloud account gets created if you authenticate using a different login method.

2. Click **Settings > Billing and Usage** in the side navigation panel, then select **Add billing information** on the Billing and Usage page.

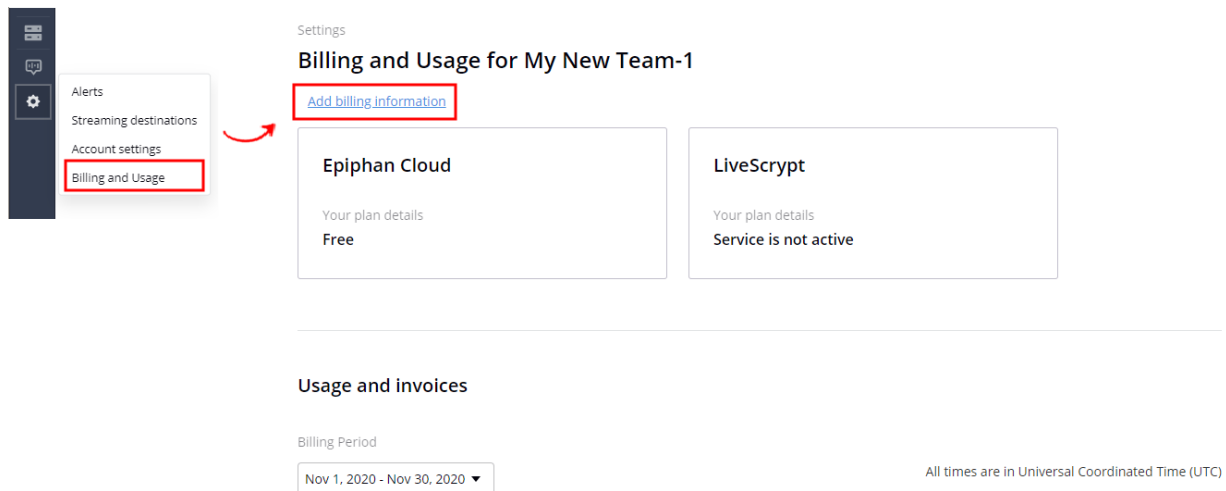

3. Enter your billing and credit card information in the pop up window. When you're done, select **Confirm billing**.

Connect the network and power on

If your network uses DHCP, then all you need to do is connect the LiveScript device to your network using a standard RJ-45 Ethernet cable. An IP address is automatically assigned to the device.



Ethernet



Now you can connect the AC power adapter and power on. The LiveScript device should automatically connect to the network. You will see a device pairing code on the touch screen.

Pair your device to your account on go.avstudio.com to get started.

Pairing code

170DC0C70DC



Your network must have access to the Internet for LiveScript transcription to work, plus the required network ports must be open with read/write privileges. Contact your IT administrator if you're not sure.

The following network ports must be open with read/write privileges for LiveScript to function properly:

- **Port 22** - SSH used for remote support (TCP).
- **Port 80** - used by the local web admin page (HTTP).
- **Port 123** - used for NTP time synchronization (TCP/UDP).
- **Port 443** - used to communicate with the LiveScript cloud transcription service (HTTPS).

For more information about network settings or assigning a static IP address, see [System network options](#).

Connect audio sources and check levels

The LiveScript device accepts multiple audio sources from cameras, digital mixers, and microphones. Embedded audio from SDI, HDMI, and USB (UVC) video sources are extracted. A single, combined mono signal is sent to the cloud for transcription.





When connecting USB web cameras and microphones, make sure to use the USB ports on the rear panel of the LiveScript device. USB devices must be UVC/UAC compliant

Analog audio inputs:

- Two mono XLR/TRS combo jacks, + 4.0 dBu up to 12.3 V RMS (+24 dBu):
 - XLR mic-level input (balanced), supports +48 V phantom power
 - ¼" TRS professional line-level input (balanced/unbalanced)
- One 3.5 mm stereo mic-level input (unbalanced)
- Two mono RCA (pair) consumer line-level inputs (-10 dBV)



Phantom power is applied to both XLR ports. Connecting devices that are not designed for phantom power when phantom power is enabled can seriously damage those devices. Always check the phantom power LED before connecting devices to the XLR ports. To enable phantom power, see **Enable or disable phantom power**.

To connect audio sources and check audio levels:


1. Connect your audio sources to the ports on the rear panel of the LiveScript device.
2. Power on the LiveScript device, see [Connect the network and power on](#).
3. Test your audio levels (for example, speak into connected microphones). You can monitor the volume in the headphones and using the VU meter on the touch screen, see [Monitor audio](#).
4. (Optional) From the touch screen, tap **Settings**  and then tap **Audio** to open the Audio options where you can add gain to the XLR, ¼" TRS, and RCA ports as required. For details about adjusting the audio gain, see [Adjust audio gain](#).

Table 4 Audio gain guidelines

Audio source	Input port	Gain
Dynamic microphone	XLR	Add +50 to +60 dB gain to the audio input port.
Electret microphone	XLR	Add +18 to +40 dB gain to the audio input port.
	3.5 mm	Add +6 to +12 dB gain to the audio input port.
Wireless microphone receiver	XLR	Add +18 to +40 dB gain to the audio input port.
	3.5 mm	Add +6 to +12 dB gain to the audio input port.
Condenser microphone with phantom power	XLR	Add +40 to +60 dB gain to the audio input port.

Audio source	Input port	Gain
Mobile phone or other consumer line level device	TRS	Add +6 to +12 dB gain to the audio input port.
	XLR	Add +6 to +12 dB gain to the audio input port.
	RCA ¹	Nominal
Professional mixer	TRS	Nominal
	XLR	Nominal
	RCA	Not recommended.


For technical details about the audio inputs, see [Audio inputs](#).

For tips on how to optimize your audio signal for the best transcription performance, see [Optimize audio performance](#).

Optimize audio performance

The better your audio source, the better LiveScript works. Here are some tips to get the best out of your LiveScript device:

- Avoid multiple people speaking at the same time or in quick succession one after the other. It takes a moment for LiveScript to adjust to each person's voice.
- Choose a quality microphone and speak directly into it at a distance of about 6 inches for a good audio signal.

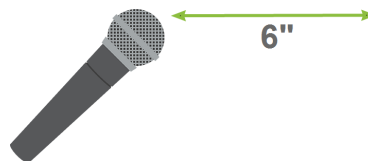


- Only connect mixers and microphones to the input ports on the LiveScript device that are rated for the compatible audio-level. Avoid adapters to connect mismatched audio signals. For more information, see [Audio inputs](#).
- Some types of microphones are more sensitive and produce a stronger audio signal. Others need a lot of gain. For general guidelines on how much gain to add to an audio signal, see [Adjust audio gain](#).
- Avoid placing microphones near sources of noise, like loud fans and air vents. If the environment is unavoidably noisy, consider using a lavalier microphone with a cardioid pickup pattern for better noise rejection.
- Check that your audio cables aren't damaged.

Connect an external display

You can connect the HDMI output from the LiveScript device to in-room monitors, projectors, and any video processing device that accepts an HDMI signal using a standard HDMI cable. No audio is included in the HDMI

output. Only the live transcription displays.

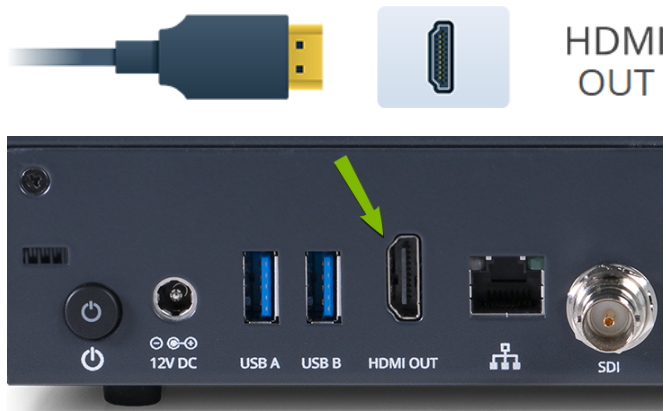

The default output is set to display medium-size white text on a black background. You can change the size of the text, as well as change the background color scheme from the **Settings** using the touch screen.


Display color schemes:

- **Dark:** White text on black background.
- **Light:** Black text on white background.
- **Green screen (white text):** White text on chroma green background.
- **Green screen (black text):** Black text on chroma green background.

Font size options:

- Huge
- Extra large
- Large
- Medium (default)
- Small

To connect to the HDMI output port and change the default settings:

1. Connect your display device to the **HDMI OUT** port on the rear panel of the LiveScript device.
2. On the touch screen, tap **Settings**  and then tap **Output** to open the Output options.
3. Modify the output port options and color schemes.
4. Tap **Apply** when you're done.


For more details about setting Output port options, see [Output display options](#)

To test your settings, an audio device must be connected. The LiveScript device must also be connected to the network and be paired to your Epiphan Cloud account with LiveScript transcription services setup.

Pair the LiveScript device

You must pair the LiveScript device to your Epiphan Cloud team that has transcription services setup before you can use the device for live transcription. You can create a new Epiphan Cloud account the first time you pair your LiveScript device or you can set it up in advance, see [Create an account and enable transcription services](#).

The device ID pairing code appears on the touch screen when the device isn't paired.

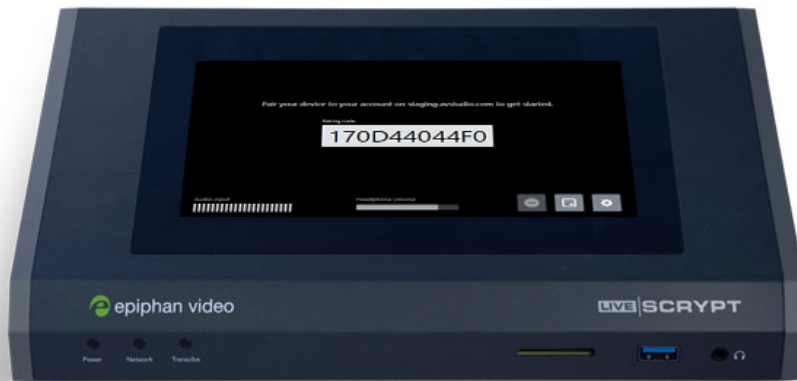

You can unpair the device using Epiphan Cloud. When you do, the device ID pairing code changes value. The next time you pair the device with Epiphan Cloud, it shows up as a new device in Epiphan Cloud with the new device ID.

Important considerations

- The LiveScript device's entry in Epiphan Cloud permanently goes offline when you unpair. You must pair the device again to start a new transcription session.
- If you pair LiveScript again after you have successfully unpaired from Epiphan Cloud, it shows up as a new LiveScript device in Epiphan Cloud. The previous instance of the device remains permanently offline.
- If you don't see the pairing code on the touch screen and the device isn't currently paired with Epiphan Cloud, you can find the pairing code in the Settings. Tap the gear icon at the bottom right corner of the touch screen and select **System**. Under the **Your device** section, use the **Device ID** as the pairing code.


To pair and unpair the LiveScript device:

1. Login to your Epiphan Cloud account at: go.epiphan.cloud



Your default Epiphan Cloud team is automatically selected. Your device is paired to the selected team.

2. Select the **LiveScript** devices icon in the side navigation panel to open the LiveScript devices page, and then select **Pair device**.

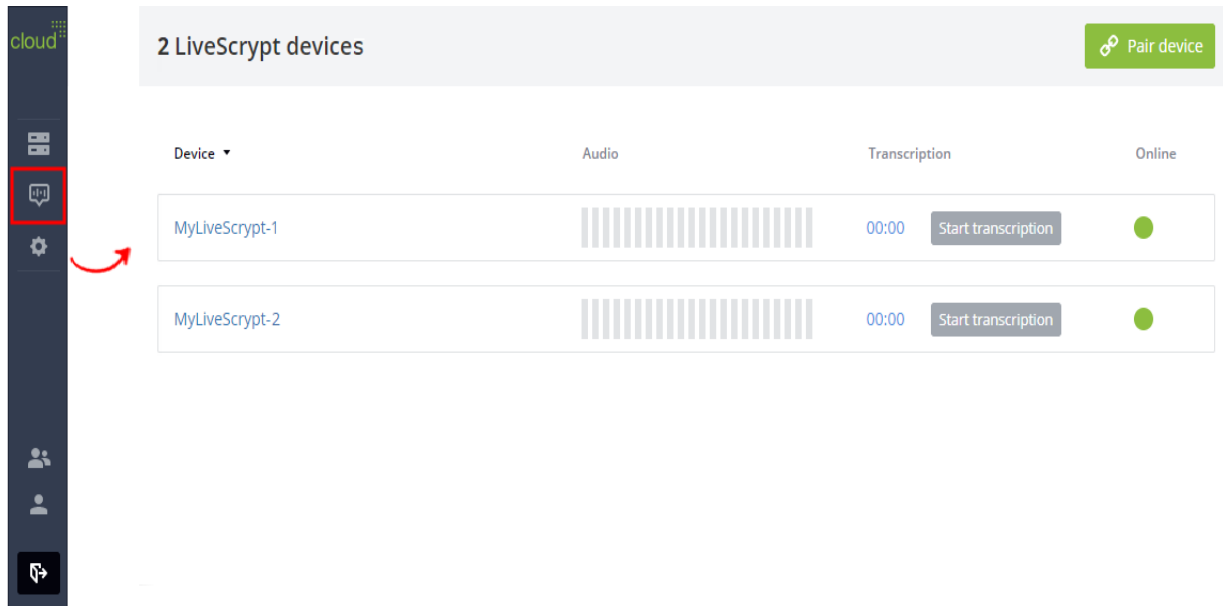


3. On the device pairing page, enter your **Device ID** pairing code and give your device a name, then select **Pair device**. Your device appears on the LiveScript devices page in Epiphan Cloud when the device is paired.

The screenshot shows a dark-themed form titled 'Pair your device to your Epiphan Cloud team account'. It has two input fields: 'Pairing code' with a question mark icon and a 'Device name' field. The 'Pairing code' field contains the text '12345678'. The 'Device name' field contains the placeholder text 'Name your device'. To the right of the 'Device name' field is a green 'Pair device' button.

You can use alphanumerical characters and spaces in the device name; however, we recommend using underscores to separate words instead of spaces. Common character sets for Western and Central European languages, Nordic languages, and Russian should display correctly for the device name in the user interface on the LiveScript device. The device name should not include the following special characters: ^ < > / \ ? * : " |


4. To unpair your LiveScript device using Epiphan Cloud, select **Devices > All devices** in the side navigation panel to open the Devices Dashboard and select the **three dots** in the row for the device you want to unpair.

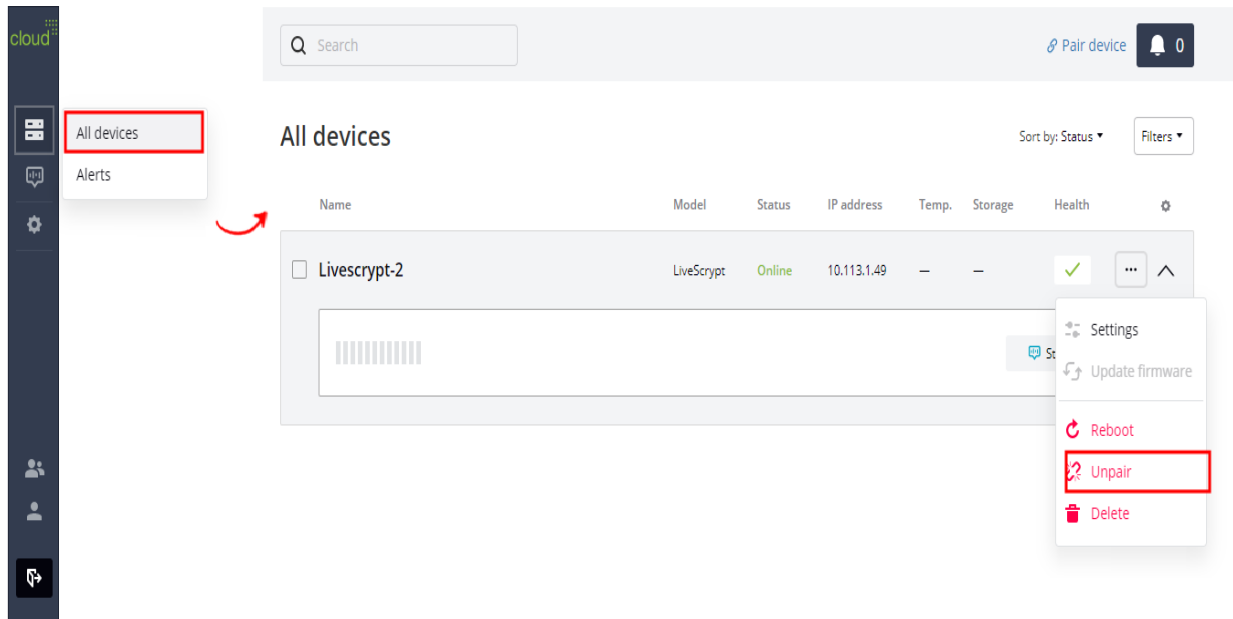

5. Select **Unpair** and confirm your selection when prompted.

Start, stop, and pause transcription using the touch screen

Easily start, stop, and pause a transcription session with a simple tap on the LiveScript device's touch screen. The time a transcription session is paused is not counted as billable time for the session.

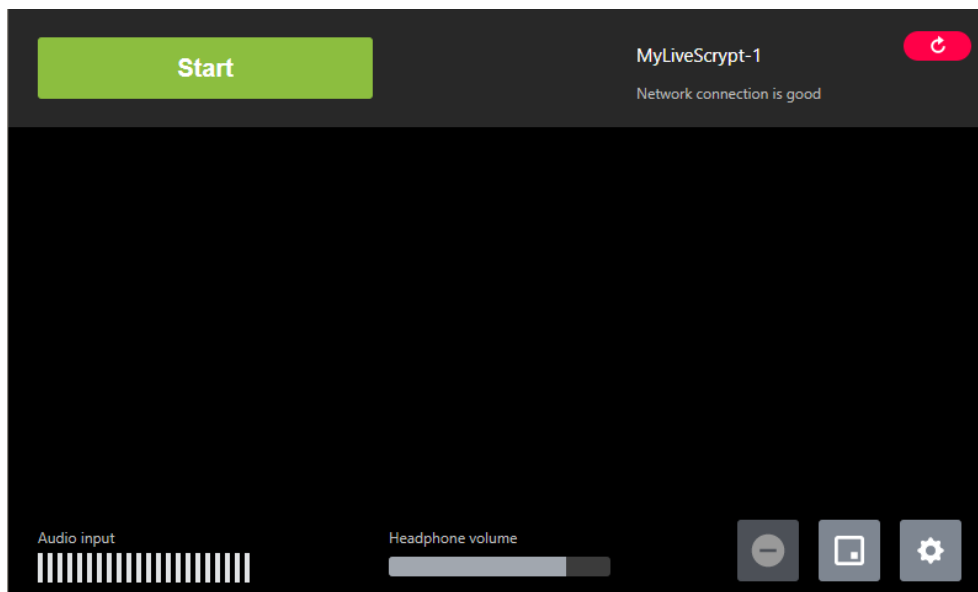



The LiveScript device must be paired to your Epiphan Cloud team to start a transcription session, see [Pair the LiveScript device](#).

To start, stop, and pause transcription from the touch screen:

1. Tap **Start** to start transcription. The buttons on the header bar change.
2. When you're done, tap the red **Stop** button in the leftmost corner of the header bar. Or tap the **Pause** button and then restart the transcription when you're ready.




Start, stop, and pause transcription using Epiphan Cloud

You can remotely start and stop a transcription session directly in Epiphan Cloud from several different places, including the Devices Dashboard, the LiveScript devices page, and from a specific device's Settings page. You can pause a session from the device's Settings page in Epiphan Cloud. The time a transcription session is paused is not counted as billable time for the session.


To start, stop, and pause transcription using Epiphan Cloud:

1. Login to your Epiphan Cloud account at: <https://go.epiphan.cloud>
2. Using Epiphan Cloud, select the **LiveScript** devices icon in the side navigation panel. The LiveScript devices page opens.

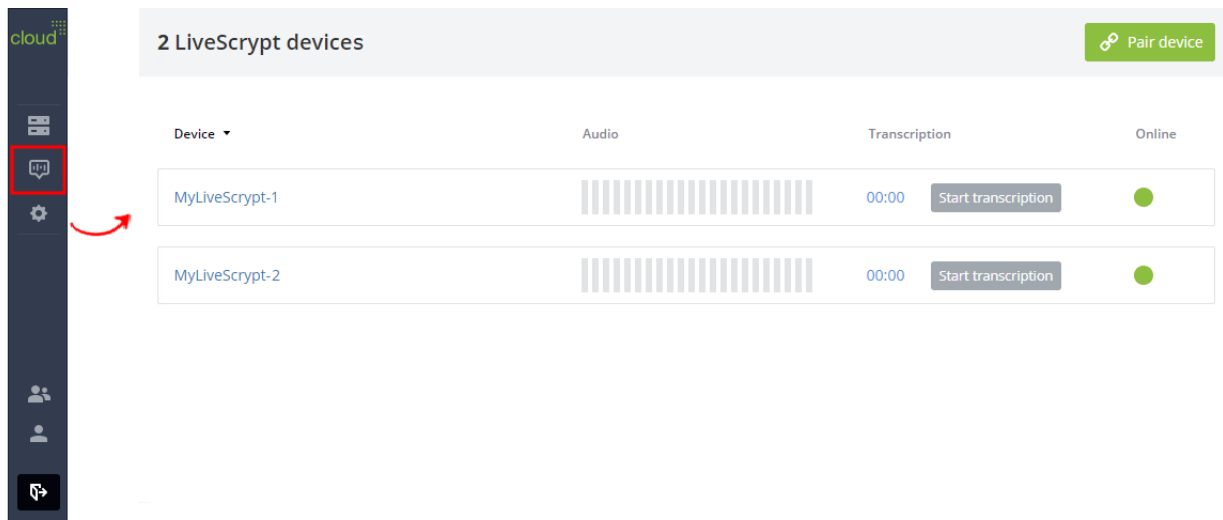

3. In the row for the LiveScript device, select **Start transcription**.
4. Select **Stop transcription** when you're done.

5. (Alternative method) To start, stop, and pause transcription from the device Settings in Epiphan Cloud:
 - a. From the LiveScript devices page, select a device name in the list to open the Settings for that device.
 - b. Select **Start transcription**.

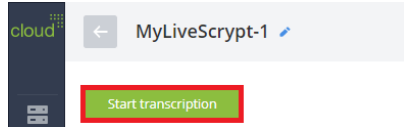


- c. When you're done, select the red stop icon in the leftmost corner of the header bar. Or select the pause icon and then restart the transcription when you're ready.




Monitor audio

Audio from all connected sources are combined into a mono signal. There's a 3.5 mm audio jack for monitoring audio on the front panel of the LiveScript device. You can plug external speakers or headphones into the 3.5 mm audio jack. The same mono signal is heard in the left and right headphone speakers.

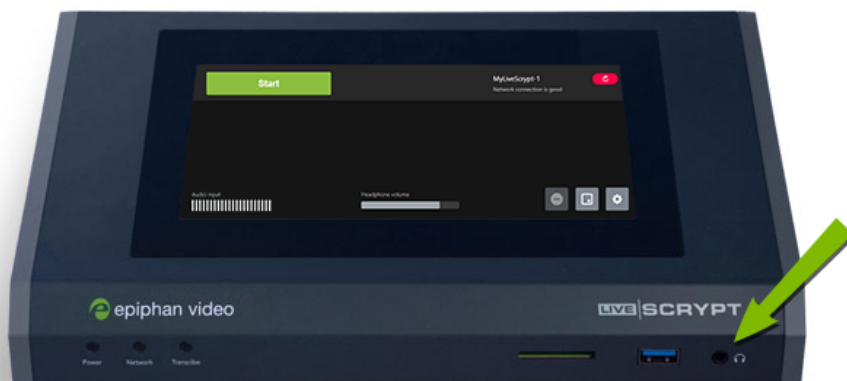


Tap or swipe the headphone volume control on the bottom of the touch screen to adjust your volume.



Increasing the headphone volume to 100% may cause you to hear distortion that is not actually present in the audio signal being sent for transcription. At approximately 75% volume, you hear the nominal audio level in the VU meter at approximately where the green bars change to yellow.

A mono VU meter on the touch screen shows the audio level of the combined audio signal. The value is displayed in dBFS (decibels relative to full scale). Colored bars represent the audio level. Similar audio VU meters appear in other places, like where you configure the audio gain in the Settings.



To optimize transcription performance and accuracy, the average signal level should register where the green bars change to yellow. Red indicates the audio signal is too loud and excessive peaks are clipped, which introduces distortion. To adjust the gain, see [Adjust audio gain](#).

Output display options

You can easily change the look of the output display directly from the touch screen. You can also configure the HDMI output display port settings and the size of the text that appears on the touch screen of your LiveScript device using the touch screen, the web interface, or Epiphan Cloud when your LiveScript device is paired with your Epiphan Cloud team.

Topics:

- [Choose the display view](#)
- [Display QR code](#)
- [Copy the QR code and session URL](#)
- [Change the display output port resolution](#)
- [Change display color scheme and font size](#)
- [Change the direction of transcription](#)
- [Change touch screen font size](#)

Choose the display view

You can quickly change what people see on the output display using the touch screen, web interface, or Epiphan Cloud. For instructions on how to access the web interface and Epiphan Cloud, see [User interfaces](#).


The display options are:

- **None:** A plain black screen with the LiveScript logo displays.
- **Text:** The live transcription displays full screen when you start transcription. The transcription appears only as speech is detected.
- **Text + QR:** The live transcription displays along with the QR code when you start transcription. The transcription appears only as speech is detected.
- **QR Code:** A full screen QR code displays when you start transcription.

To make other visual changes, like changing the color of the background or the font size, see [Transcription options](#).


To choose the display view:

1. Using the touch screen or web interface, tap the **Display view** icon and choose the view you want to display. The selected view is highlighted in blue.

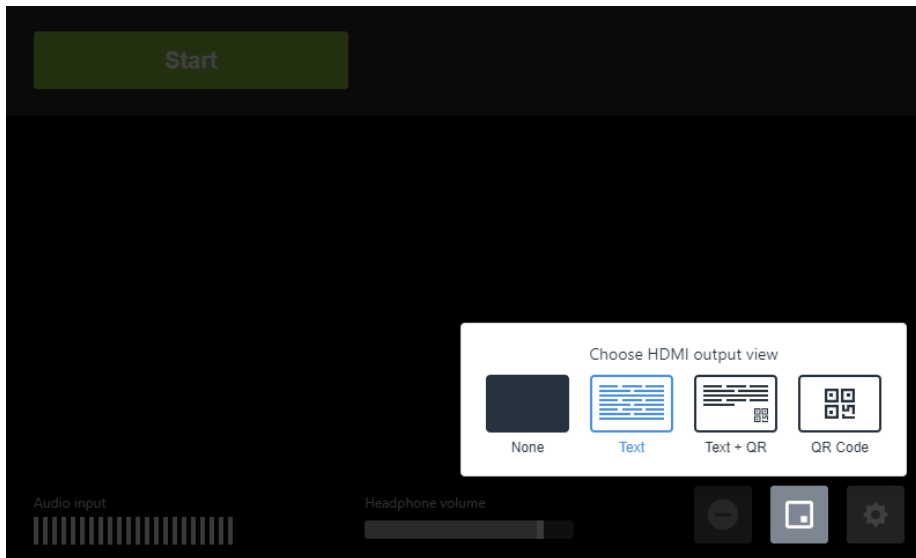


2. Using Epiphan Cloud, do the following:

- a. Select the **LiveScript** devices icon in the side navigation panel, and then select a LiveScript device to open the device **Settings**.

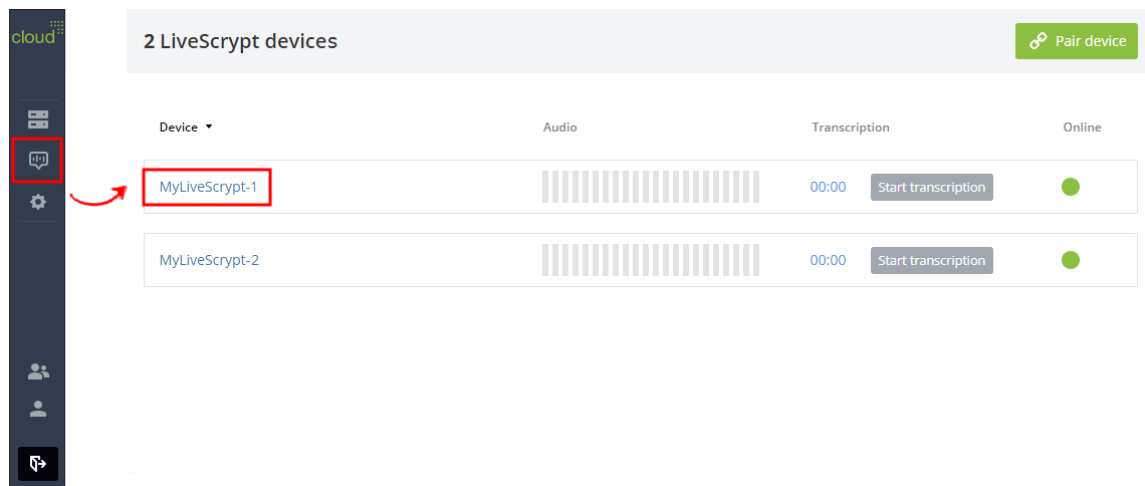


You can also open the LiveScript device settings page from the Devices Dashboard when you click the LiveScript device name or click the three dots in the row for the LiveScript device and select **Settings**.

- b. From the **Settings**, select **Output**. The Output menu opens.



- c. In the **Layout** field, select a layout from the drop-down menu.

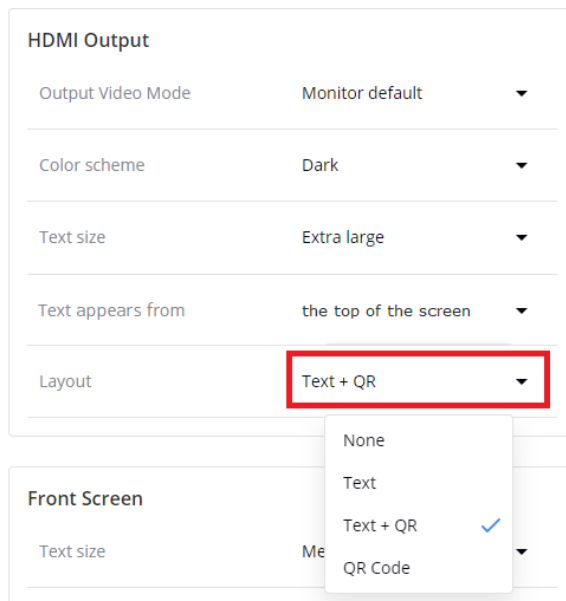

Display QR code

It's easy to show a QR code on the HDMI output display port so that people can connect to the live transcription using their favorite browser on their smart device. You can display the QR code using the touch screen, the web interface, or Epiphan Cloud when the device is paired with your Epiphan Cloud team. For instructions on how to access the web interface and Epiphan Cloud, see [User interfaces](#).


The QR code display options are:

- **Text + QR:** The live transcription displays along with the QR code when you start transcription. The transcription appears only as speech is detected.
- **QR Code:** A full screen QR code displays when you start transcription.


To copy the QR code and transcription session URL to provide them to audiences so they can watch the live transcription from a smart device or computer, see [Transcription options](#).

To display the QR code:

1. Using the touch screen or web interface, tap the **Display view** icon and choose the view you want to display. The selected view is highlighted in blue.

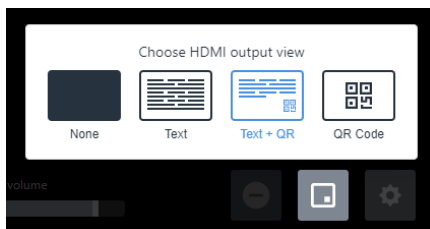

2. Using Epiphan Cloud, do the following:
 - a. Select the **LiveScript** devices icon in the side navigation panel, and then select a LiveScript device to open the device **Settings**.

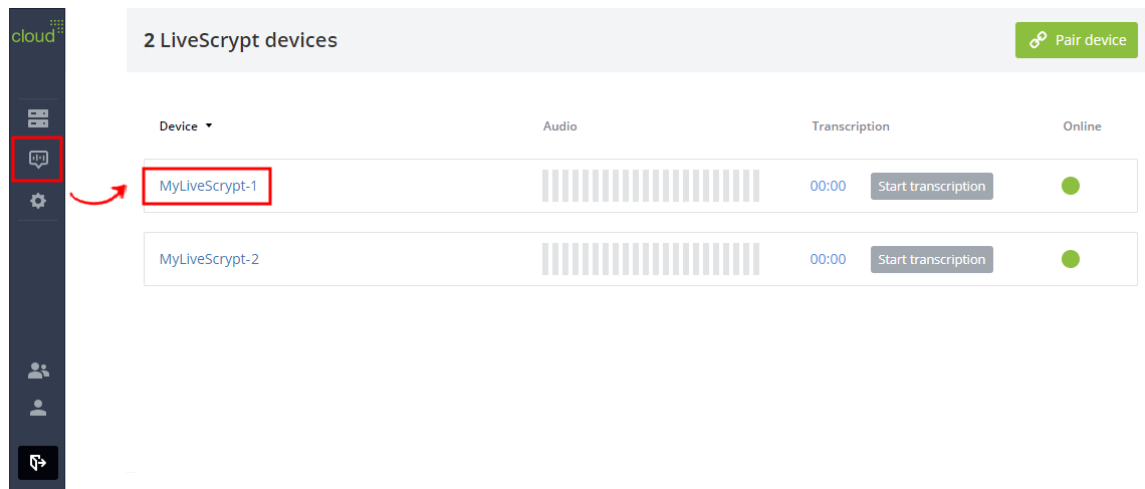

You can also open the LiveScript device settings page from the Devices Dashboard when you click the LiveScript device name or click the three dots in the row for the LiveScript device and select **Settings**.

- b. From the **Settings**, select **Output**. The Output menu opens.



- c. In the **Layout** field, select a layout from the drop-down menu.

The screenshot shows the 'HDMI Output' settings panel with the following options:

Setting	Value
Output Video Mode	Monitor default
Color scheme	Dark
Text size	Extra large
Text appears from	the top of the screen
Layout	Text + QR

Below the HDMI Output panel is the 'Front Screen' panel, which has a 'Text size' setting. A dropdown menu is open for the 'Layout' field, showing the following options:

- None
- Text
- Text + QR (selected with a blue checkmark)
- QR Code

Copy the QR code and session URL


Using Epiphan Cloud, you can copy the QR code and transcription session URL to provide them to audiences so they can watch the live transcription from a smart device or computer.



If the LiveScript device is unpaired and permanently offline, it won't appear in the list of LiveScript devices.


To copy the QR code and session URL using Epiphan Cloud:

1. Login to your Epiphan Cloud account at: <https://go.epiphan.cloud>
2. Select the **LiveScript** devices icon in the side navigation panel, and then select a LiveScript device to open the device **Settings**.

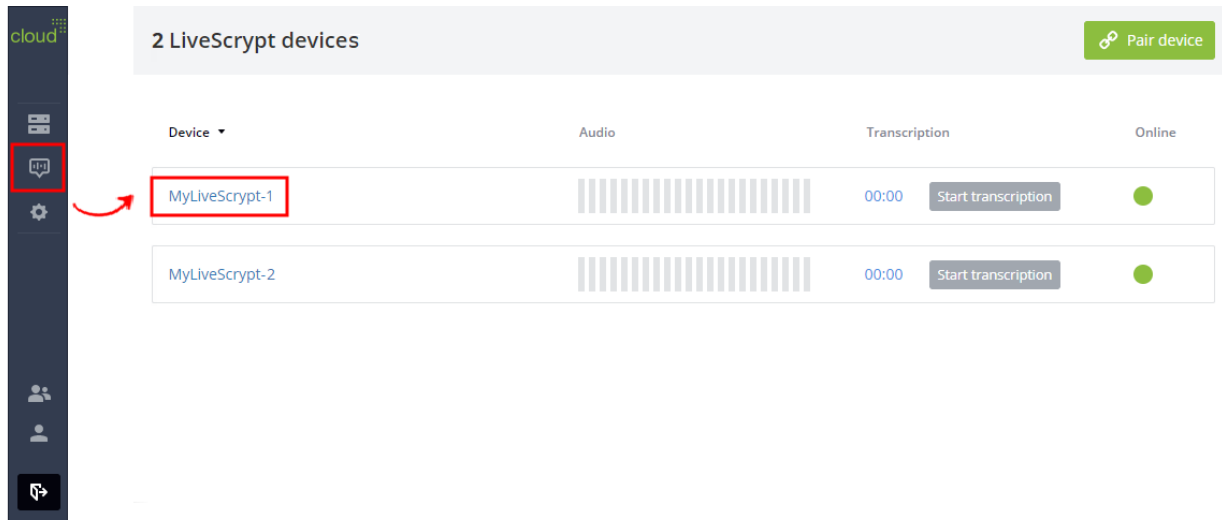


You can also open the LiveScript device settings page from the Devices Dashboard when you click the LiveScript device name or click the three dots in the row for the LiveScript device and select **Settings**.

3. From the **Settings**, select **Output**. The Output menu opens.



4. In the **Web stream** section, select **Copy** beside the Stream URL or QR code to copy it to your clipboard. Then paste it into your document or email.

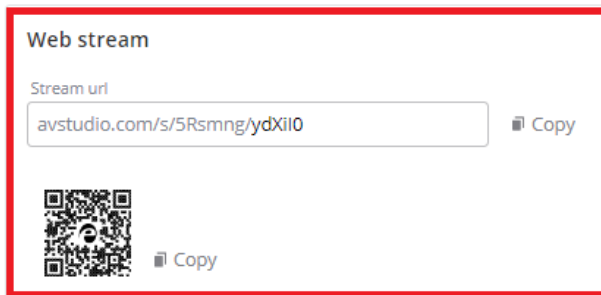


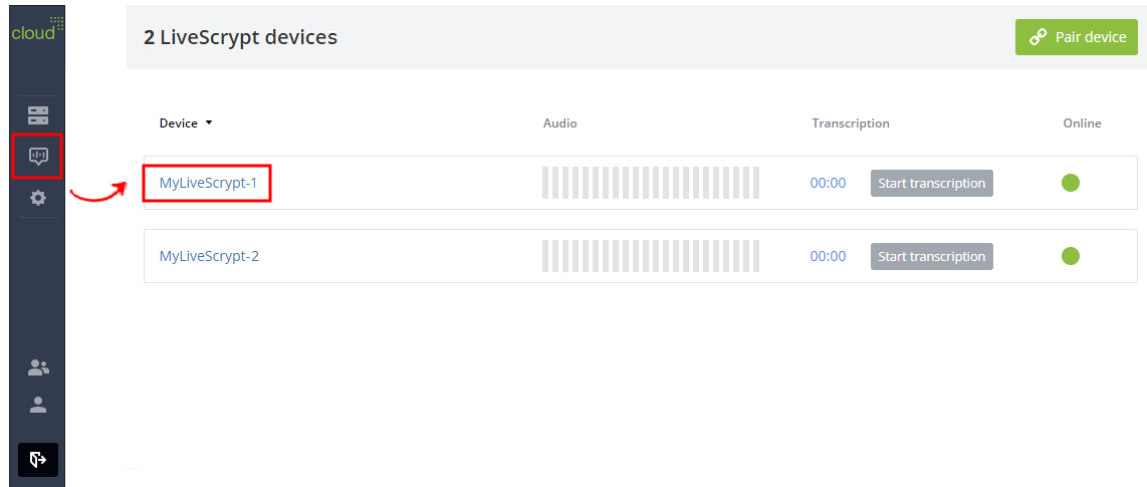
Change the display output port resolution

The default resolution of the HDMI display output port should work for most situations; however, you can manually select a resolution using the touch screen, the web interface, or Epiphan Cloud when the LiveScript device is paired with your Epiphan Cloud team. For instructions on how to access the web interface or Epiphan Cloud, see [User interfaces](#).

To change the display output port resolution:

1. Open the device Settings, do one of the following:

- a. Using the touch screen or web interface, select **Settings** .
- b. Using Epiphan Cloud, select the **LiveScript** devices icon in the side navigation panel, and then select a LiveScript device to open the device **Settings**.




You can also open the LiveScript device settings page from the Devices Dashboard when you click the LiveScript device name or click the three dots in the row for the LiveScript device and select **Settings**.


2. From the **Settings**, select **Output**. The Output menu opens.



3. In the **Output Video Mode** field, select a resolution from the drop-down menu.

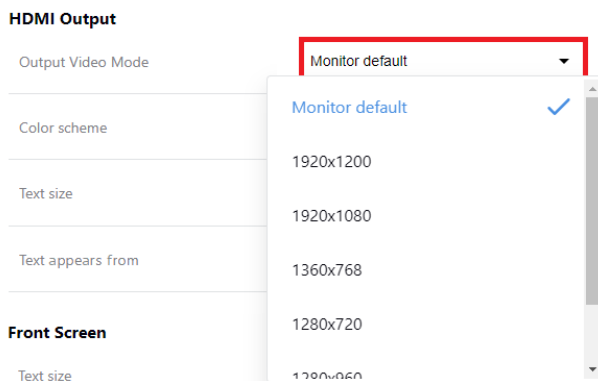

4. Select **Apply** if you're using the touch screen or web interface.



Change display color scheme and font size


You can change the color scheme of the HDMI display output and the transcription font size using the touch screen, the web interface, or Epiphan Cloud when the LiveScript device is paired with your Epiphan Cloud team. For instructions on how to access the web interface or Epiphan Cloud, see [User interfaces](#).


The default output is set to display medium-size white text on a black background. You can change the size of the text, as well as the background color scheme from the Settings.

Display color schemes:

- **Dark:** White text on black background.
- **Light:** Black text on white background.
- **Green screen (white text):** White text on chroma green background.
- **Green screen (black text):** Black text on chroma green background.

To change the color scheme of the display output and the font size:

1. Open the device Settings, do one of the following:
 - a. Using the touch screen and web interface, select **Settings** .
 - b. Using Epiphan Cloud, select the **LiveScript** devices icon in the side navigation panel, and then select a LiveScript device to open the device **Settings**.

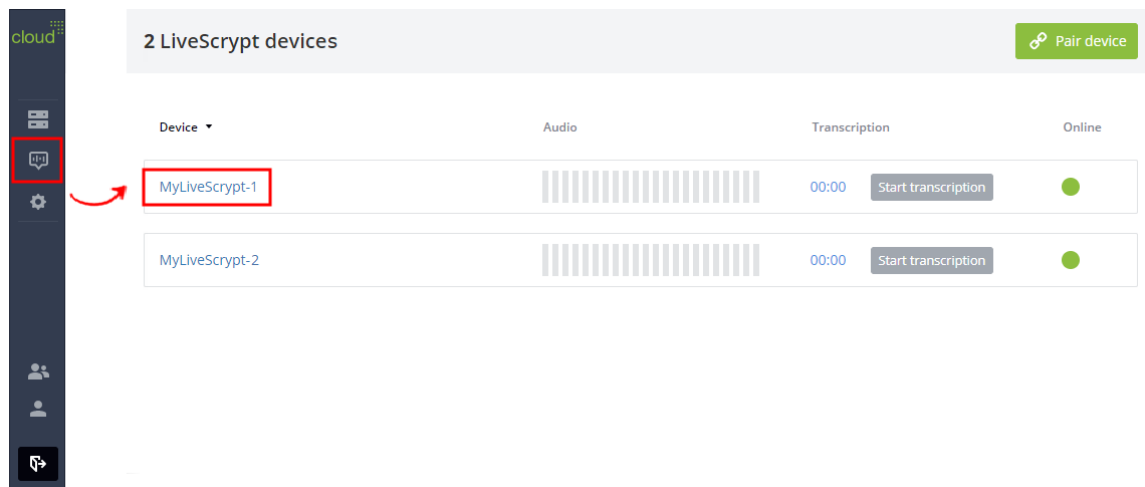


You can also open the LiveScript device settings page from the Devices Dashboard when you click the LiveScript device name or click the three dots in the row for the LiveScript device and select **Settings**.


- From the **Settings**, select **Output**. The Output menu opens.




- To change the color scheme, select a scheme from the **Color scheme** drop-down menu.

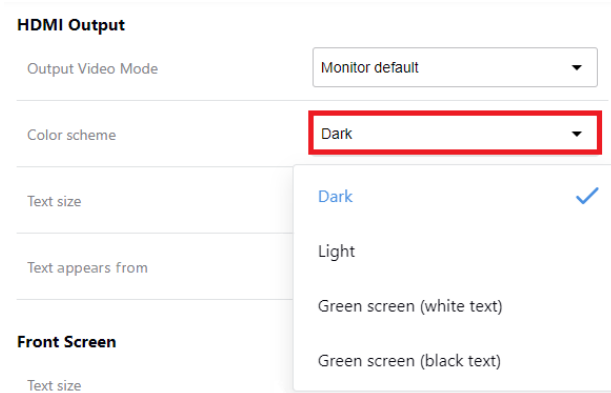

- To change the font size, select a size from the **Text size** drop-down menu.

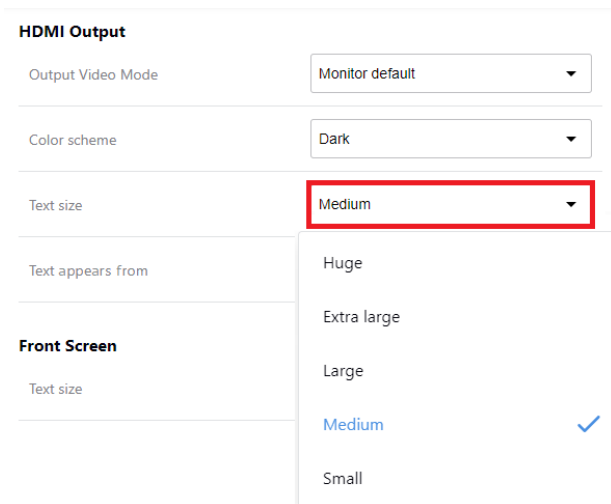

- Select **Apply** if you're using the touch screen or web interface.




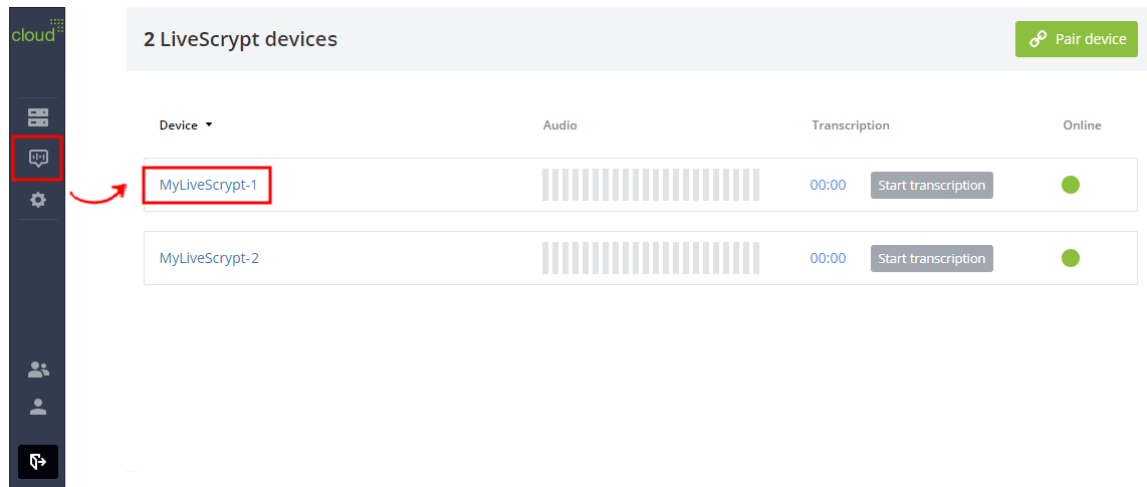
Change touch screen font size

You can change the font size of the transcription displayed on the LiveScript device's touch screen using the touch screen, the web interface, or Epiphan Cloud when the LiveScript device is paired with your Epiphan Cloud team. The default output is set to display medium size white text on a black background.

For instructions on how to access the web interface or Epiphan Cloud, see [User interfaces](#).

To change the font size of the transcription displayed on the touch screen:

1. Open the device Settings, do one of the following:
 - a. Using the touch screen and web interface, select **Settings** .
 - b. Using Epiphan Cloud, select the **LiveScript** devices icon in the side navigation panel, and then select a LiveScript device to open the device **Settings**.




You can also open the LiveScript device settings page from the Devices Dashboard when you click the LiveScript device name or click the three dots in the row for the LiveScript device and select **Settings**.


2. From the **Settings**, select **Output**. The Output menu opens.



3. In the **Front Screen** section, select a size in the **Text size** drop-down menu.

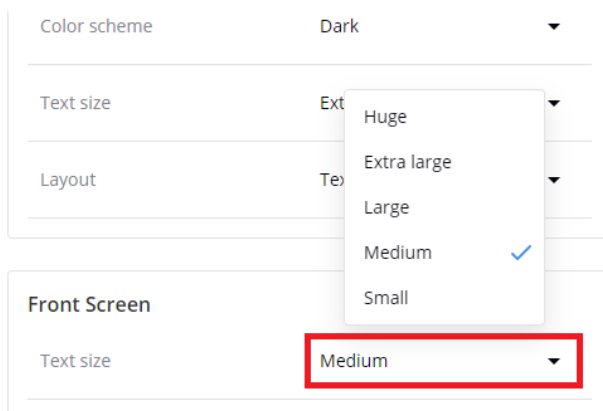

4. Select **Apply** if you're using the touch screen or web interface.




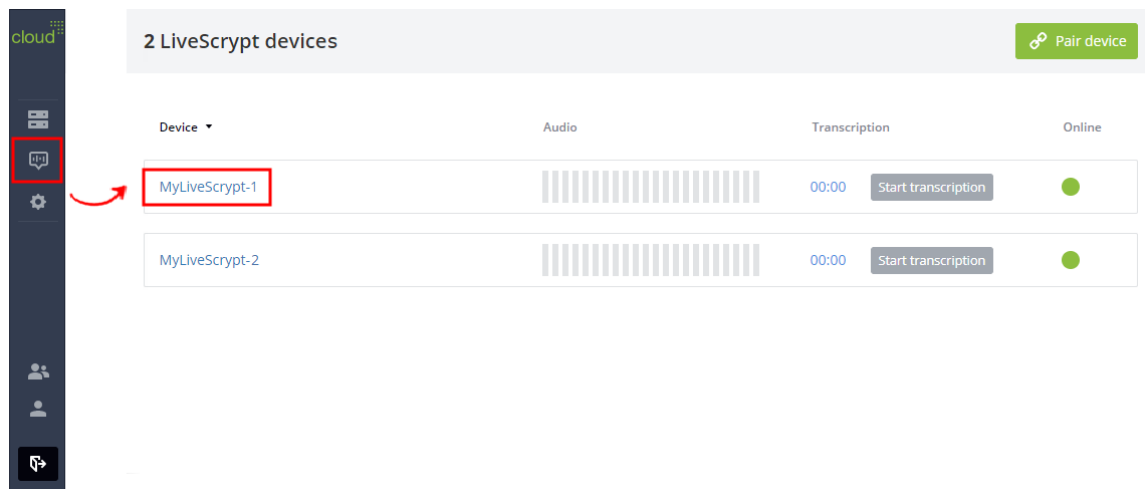
Change the direction of transcription

By default, new lines of transcription start at the top of the screen and move down as new text fills the screen. You can change the direction so that the transcription fills the screen from the bottom and moves upwards using the touch screen, the web interface, or Epiphan Cloud when the LiveScript device is paired with your Epiphan Cloud team. For instructions on how to access the web interface or Epiphan Cloud, see [User interfaces](#).

Words are written from left to right by default and cannot be changed.

To change the direction the transcription fills the screen:

1. Open the device Settings, do one of the following:
 - a. Using the touch screen or web interface, select **Settings** .
 - b. Using Epiphan Cloud, select the **LiveScript** devices icon in the side navigation panel, and then select a LiveScript device to open the device **Settings**.



You can also open the LiveScript device settings page from the Devices Dashboard when you click the LiveScript device name or click the three dots in the row for the LiveScript device and select **Settings**.

2. From the **Settings**, select **Output**. The Output menu opens.




3. In the **Text appears from** field, select an option from the drop-down menu.

HDMI Output

Output Video Mode	1280x720 ▼
Color scheme	Green screen (white text) ▼
Text size	Large ▼
Text appears from	the top of the screen ▼

4. Select **Apply** if you're using the touch screen or web interface.



Transcription options

You can setup transcription options using the touch screen, the web interface, and in Epiphan Cloud when your LiveScript device is paired.

Topics:

- [Change the language](#)
- [Enable punctuation and profanity filter](#)
- [Enter an NAICS code](#)
- [Clear transcription from the display](#)
- [Download and delete .SRT and .TXT files](#)

To start, stop, and pause transcription, see [Start, stop, and pause transcription using the touch screen](#) or [Start, stop, and pause transcription using Epiphan Cloud](#).

Change the language


English (US) is set as the default language for transcription. This means that English speech is recognized and transcribed. You can change the transcription language using the touch screen, the web interface, or Epiphan Cloud when the LiveScript device is paired with your Epiphan Cloud team. For instructions on how to access the web interface or Epiphan Cloud, see [User interfaces](#).


LiveScript supports Google Cloud's language set for the basic ASR speech recognition model. For a comprehensive list, see <https://cloud.google.com/speech-to-text/docs/languages>.



Changes do not take effect while transcription is in progress. You must stop or pause transcription, and then restart transcription to see the changes.


To change the language:

1. Open the device Settings:
 - a. Using the touch screen and web interface, select **Settings** .
 - b. Using Epiphan Cloud, select the **LiveScript** devices icon in the side navigation panel, and then select a LiveScript device to open the device **Settings**.

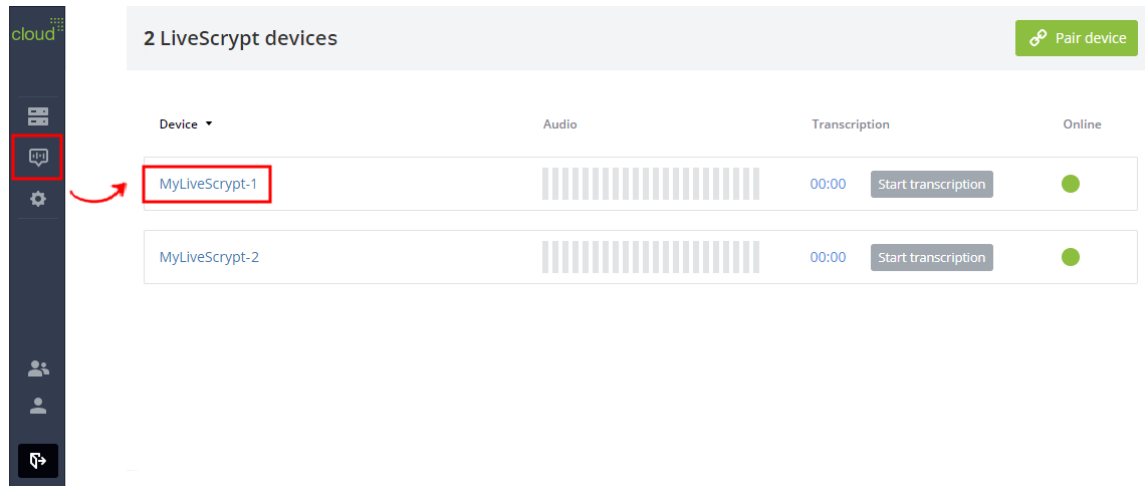

You can also open the LiveScript device settings page from the Devices Dashboard when you click the LiveScript device name or click the three dots in the row for the LiveScript device and select **Settings**.


2. From the **Settings**, select **Transcription**. The Transcription menu opens.



3. In the **Language** field, select your language from the drop-down menu.

Language	English (US) ▼
Profanity filter	<input checked="" type="checkbox"/> On
Enable punctuation	<input checked="" type="checkbox"/> On
NAICS code	<input type="text"/>

4. Select **Apply** if you're using the touch screen or web interface.



Enable punctuation and profanity filter


Automatic punctuation and the profanity filter are enabled by default. You can turn the punctuation and profanity filter options on and off from the touch screen, the web interface, or using Epiphan Cloud when the LiveScript device is paired with your Epiphan Cloud team. For instructions on how to access the web interface or Epiphan Cloud, see [User interfaces](#).


The profanity filter replaces profane words with asterisks, for example: b***



Changes do not take effect while transcription is in progress. You must stop or pause transcription, and then restart transcription to see the changes.

To turn punctuation and the profanity filter on or off:

1. Open the device Settings:
 - a. Using the touch screen and web interface, select **Settings** .
 - b. Using Epiphan Cloud, select the **LiveScript** devices icon in the side navigation panel, and then select a LiveScript device to open the device **Settings**.

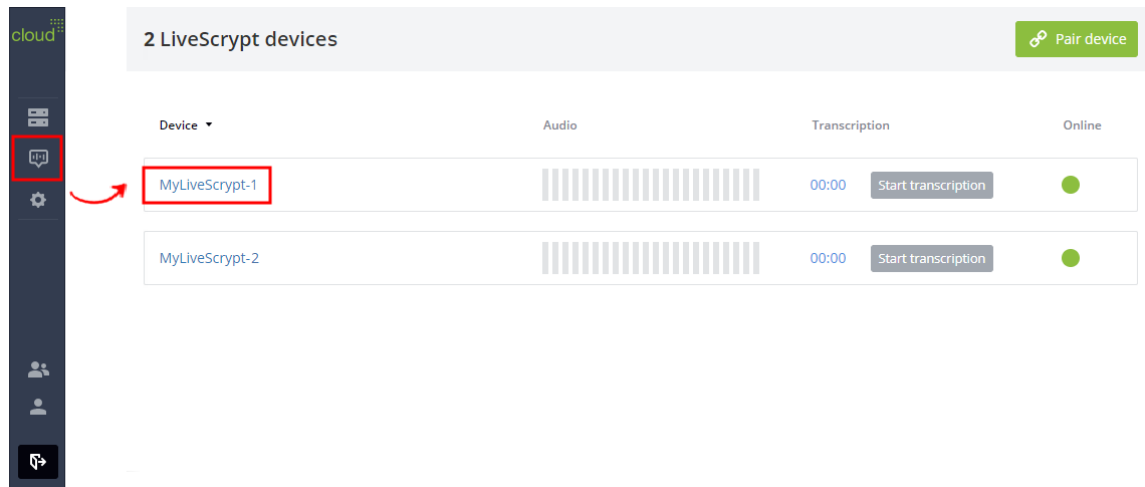

You can also open the LiveScript device settings page from the Devices Dashboard when you click the LiveScript device name or click the three dots in the row for the LiveScript device and select **Settings**.


2. From the **Settings**, select **Transcription**. The Transcription menu opens.

 **Transcription**

3. Toggle the **Punctuation** and **Profanity filter** switches On or Off. In Epiphan Cloud, check the appropriate check boxes.

Language	English (US) ▼
Profanity filter	<input checked="" type="checkbox"/> On
Enable punctuation	<input checked="" type="checkbox"/> On
NAICS code	<input type="text"/>

4. Select **Apply** if you're using the touch screen or web interface.




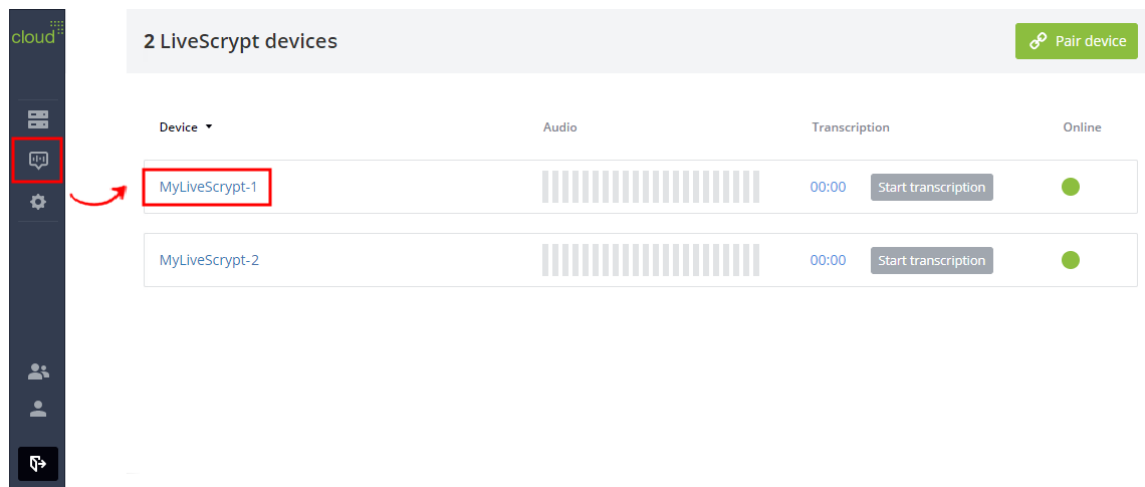
Enter an NAICS code

North American Industry Classification System (NAICS) codes are industry-specific language libraries, for example: aerospace (33641) or agriculture (115). LiveScript supports NAICS codes to augment transcription.

You can enter an NAICS code using the touch screen, the web interface, or Epiphan Cloud when the LiveScript device is paired with your Epiphan Cloud team. For instructions on how to access the web interface or Epiphan Cloud, see [User interfaces](#).


To enter an NAICS code:

1. Open the device Settings:
 - a. Using the touch screen and web interface, select **Settings** .
 - b. Using Epiphan Cloud, select the **LiveScript** devices icon in the side navigation panel, and then select a LiveScript device to open the device **Settings**.



You can also open the LiveScript device settings page from the Devices Dashboard when you click the LiveScript device name or click the three dots in the row for the LiveScript device and select **Settings**.


2. From the **Settings**, select **Transcription**. The Transcription menu opens.



3. In the **NAICS code** field, enter the code using a keyboard.

Language	English (US) ▼
Profanity filter	<input checked="" type="checkbox"/> On
Enable punctuation	<input checked="" type="checkbox"/> On
NAICS code	<input type="text"/>

4. Select **Apply** if you're using the touch screen or web interface.



Clear transcription from the display


You can clear the content of the current transcription session from the display without stopping or pausing the session. All previously transcribed text is cleared from the touch screen and the HDMI output display port. You can only clear the transcription for a session that's currently active.

Clearing the session does not delete the transcribed content from the .SRT or the .TXT file for that session. Those files retain the full transcription of the whole session.


You can clear the transcription for a session using the touch screen, the web interface, or Epiphan Cloud when the LiveScript device is paired with your Epiphan Cloud team. For instructions on how to access the web interface or Epiphan Cloud, see [User interfaces](#).

To clear the transcription from the display for an active session:

1. Using the touch screen and web interface, tap the **Clear** icon that appears along the bottom of the touch screen and select **Yes, clear it**.

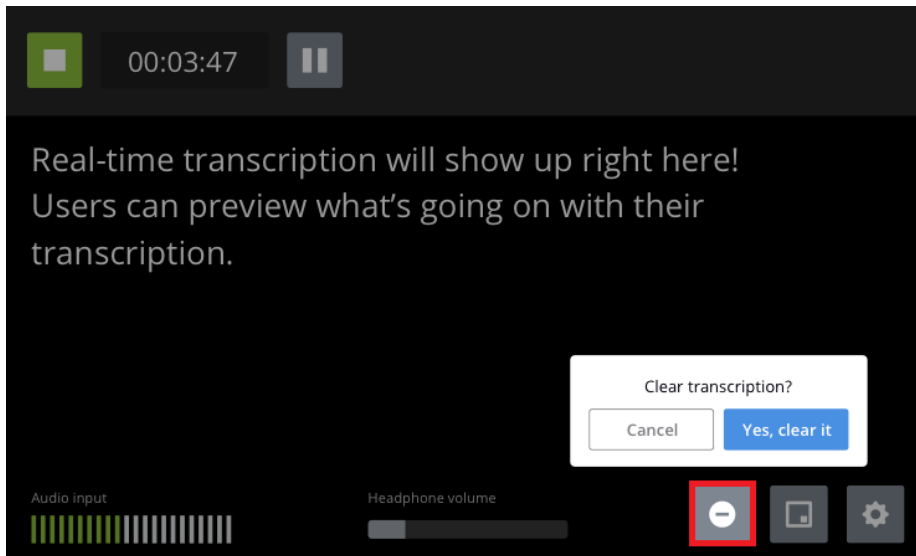


2. Using Epiphan Cloud, do the following:
 - a. Select the **LiveScript** devices icon in the side navigation panel, and then select a LiveScript device to open the device **Settings**.

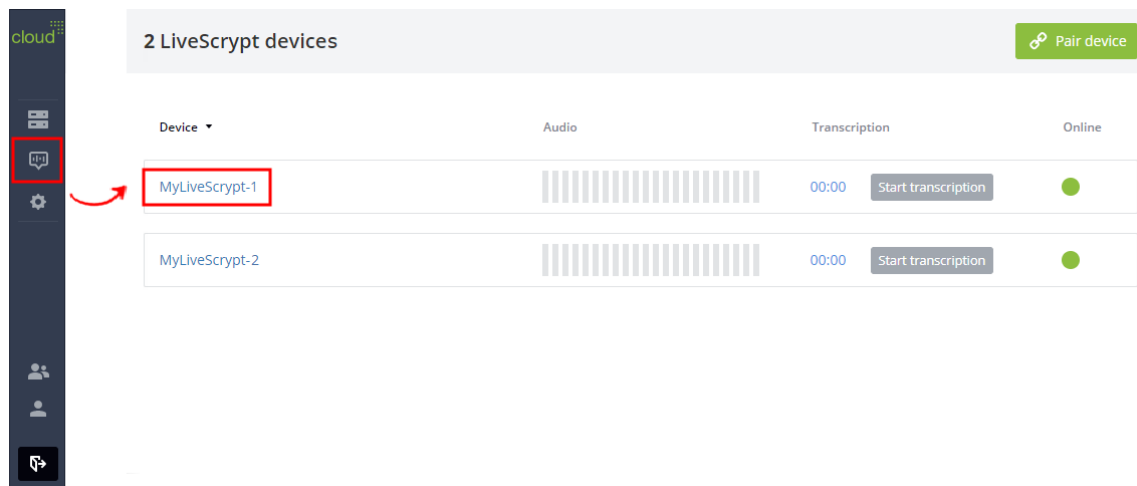

You can also open the LiveScript device settings page from the Devices Dashboard when you click the LiveScript device name or click the three dots in the row for the LiveScript device and select **Settings**.

- b. From the **Settings**, select **Clear** in the bottom right corner of the display area.

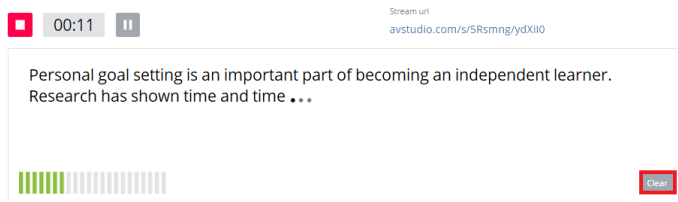


Download and delete .SRT and .TXT files

You can access .SRT and .TXT transcription files for the sessions associated with a device as often as you like using Epiphan Cloud. Download transcription files or delete them from the Sessions tab on the Settings page for a paired LiveScript device.

If the LiveScript device is unpaired and permanently offline, it won't appear in the list of LiveScript devices. You can no longer access the .SRT or .TXT transcription files associated with that device.


To download or delete .SRT and .TXT files in Epiphan Cloud:

1. Login to your Epiphan Cloud account at: <https://go.epiphan.cloud>
2. Select the **LiveScript** devices icon in the side navigation panel, and then select a LiveScript device to open the device **Settings**.

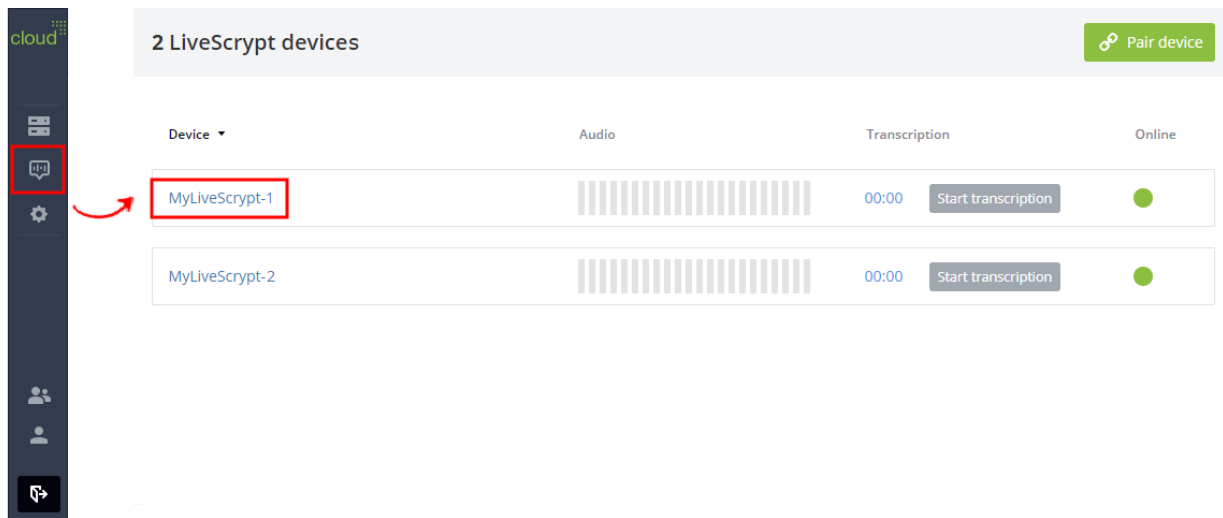

You can also open the LiveScript device settings page from the Devices Dashboard when you click the LiveScript device name or click the three dots in the row for the LiveScript device and select **Settings**.

3. From the **Settings**, select the **Sessions** menu to see a list of the transcription sessions for that device.

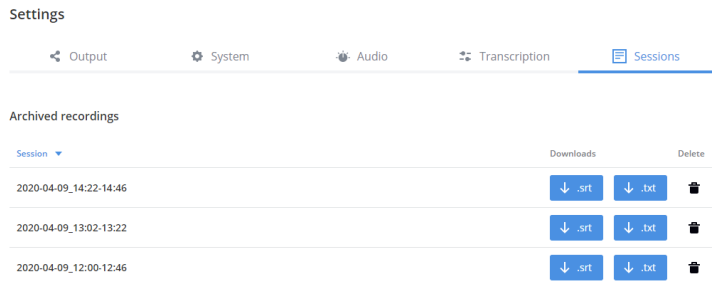

4. To download a transcription file, select the blue download button for the file you want to download and follow the prompts.
5. To delete a transcription file, select the trash can icon at the far right of that row and confirm when prompted.
- 6.



Transcription files are permanently removed if you delete a session in Epiphan Cloud or delete a paired instance of your LiveScript device from Epiphan Cloud. To learn more about Epiphan Cloud, see the [Epiphan Cloud online user guide](#).

Audio options

If you went through the Get started section, you already have a basic setup with some audio sources connected to the LiveScript device. This section contains additional information and audio options you can setup using the touch screen, the web interface, and Epiphan Cloud when your LiveScript device is paired with your Epiphan Cloud team.

Topics:

- [Enable or disable phantom power](#)
- [Adjust audio gain](#)
- [Mute audio](#)
- [Assign audio sources to an input](#)

For information about monitoring audio, see [Monitor audio](#).

Adjust audio gain

Having the right amount of gain applied to your microphone or other type of audio source optimizes the performance of the transcription. You can adjust the gain for XLR, ¼" TRS, RCA, and 3.5 mm inputs using the touch screen, web interface, and Epiphan Cloud when your LiveScript device is paired with your Epiphan Cloud team.

The amount of gain you need to add depends on the strength of the original audio signal. Adjusting the **Input Gain** affects the volume of the audio that's sent to the cloud for transcription and what you hear in the headphone jack.



Be aware that excessive amounts of gain increases the noise that may already be present in the audio signal, which can affect the accuracy of transcription.

The following table offers some guidelines for adjusting the gain at the various audio input ports on the LiveScript device for common types of audio input devices. Add the suggested gain to the audio input to get an average signal to register at a nominal level in the VU meter (i.e. where the green bars change to yellow).




Table 5 Audio input port gain guidelines


Audio source	Input port	Gain
Dynamic microphone	XLR	Add +50 to +60 dB gain to the audio input port.


Audio source	Input port	Gain
Electret microphone	XLR	Add +18 to +40 dB gain to the audio input port.
	3.5 mm	Add +6 to +12 dB gain to the audio input port.
Wireless microphone receiver	XLR	Add +18 to +40 dB gain to the audio input port.
	3.5 mm	Add +6 to +12 dB gain to the audio input port.
Condenser microphone with phantom power	XLR	Add +40 to +60 dB gain to the audio input port.
Mobile phone or other consumer line level device	TRS	Add +6 to +12 dB gain to the audio input port.
	XLR	Add +6 to +12 dB gain to the audio input port.
	RCA ¹	Nominal
Professional mixer	TRS	Nominal
	XLR	Nominal
	RCA	Not recommended.

¹ To avoid unwanted signal noise on the RCA ports, we recommend adding no more than 12dB of gain to the RCA ports or when RCA/3.5 mm is used.

Ensure the audio input source is connected to an analog audio input port on the LiveScript device before proceeding. Gain is added to both the RCA and 3.5 mm inputs if the audio mode is set to RCA + 3.5 mm. For information about setting the audio input mode, see [Assign audio sources to an input](#).

To adjust the gain for an audio source:

1. Open the device Settings:
 - a. Using the touch screen and web interface, select **Settings** .
 - b. Using Epiphan Cloud, select the **LiveScript** devices icon in the side navigation panel, and then select a LiveScript device to open the device **Settings**.

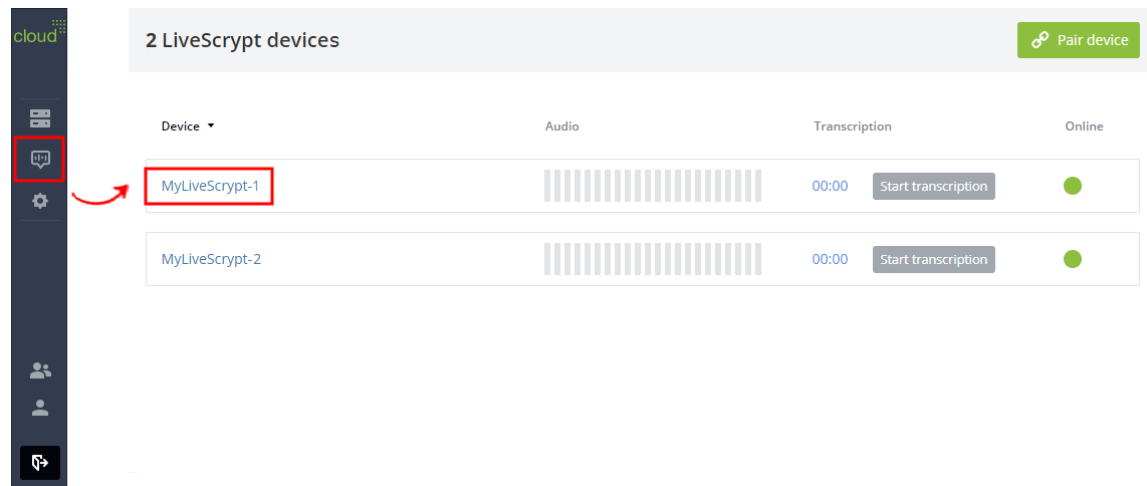


You can also open the LiveScript device settings page from the Devices Dashboard when you click the LiveScript device name or click the three dots in the row for the LiveScript device and select **Settings**.


- From the **Settings**, select **Audio**. The Audio menu opens.



- Select a value from the **Gain** drop-down menu for the audio source.

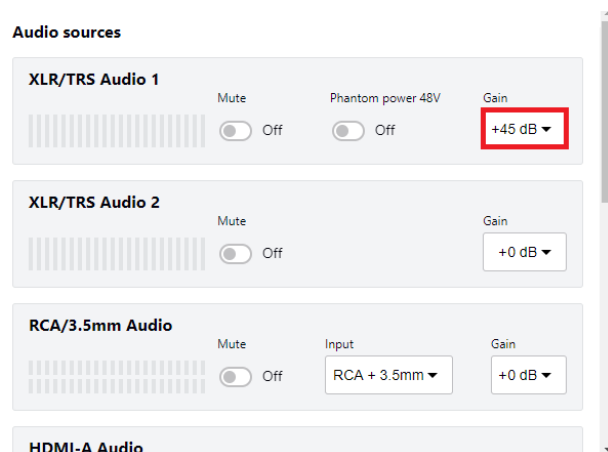

- Select **Apply** if you're using the touch screen or web interface.



Enable or disable phantom power

Phantom power is not enabled on the XLR audio input ports by default on LiveScript. You can enable 48 V Phantom power for the two XLR ports using the touch screen, the web interface, and Epiphan Cloud when the LiveScript device is paired with your Epiphan Cloud team.


When phantom power is enabled:


- 48 V phantom power is applied to both XLR port 1 and XLR port 2.
- The phantom power LED beside the XLR/TRS combo jacks on the rear panel of LiveScript is solid on.
- Phantom power is not applied to the 1/4" TRS inputs of the combo jacks.



Connecting devices that are not designed for phantom power when phantom power is enabled for the two XLR ports can seriously damage those devices. Always check the phantom power LED before connecting devices to the XLR ports. A direct box can be used to provide the correct mic-level signal to the XLR port and offers some isolation protection in case of accidental exposure to 48 V phantom power.

To enable or disable phantom power:

1. Open the device Settings:
 - a. Using the touch screen and web interface, select **Settings** .
 - b. Using Epiphan Cloud, select the **LiveScript** devices icon in the side navigation panel, and then select a LiveScript device to open the device **Settings**.

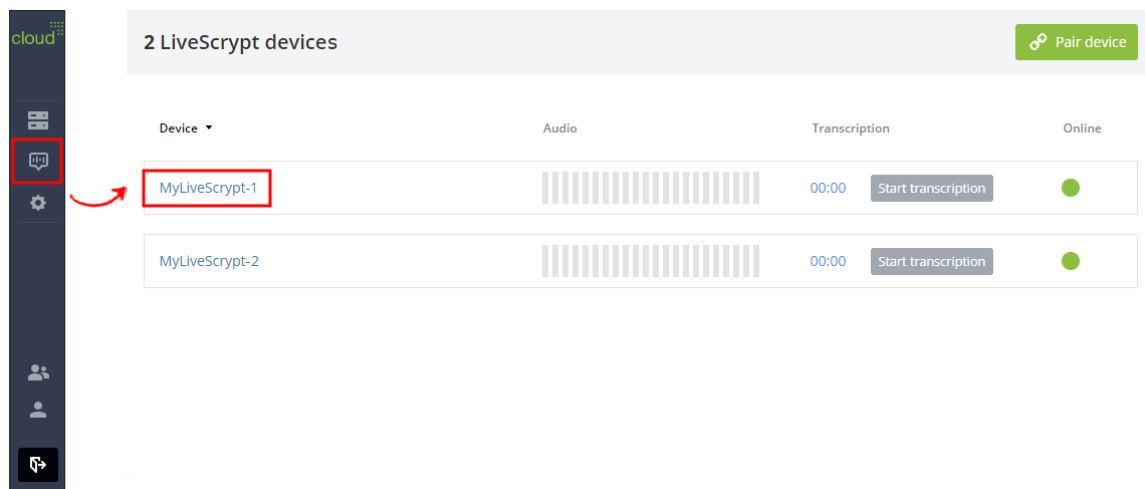


You can also open the LiveScript device settings page from the Devices Dashboard when you click the LiveScript device name or click the three dots in the row for the LiveScript device and select **Settings**.


- From the **Settings**, select **Audio**. The Audio menu opens.



- Toggle the **Phantom power 48V** switch On or Off for the audio source.

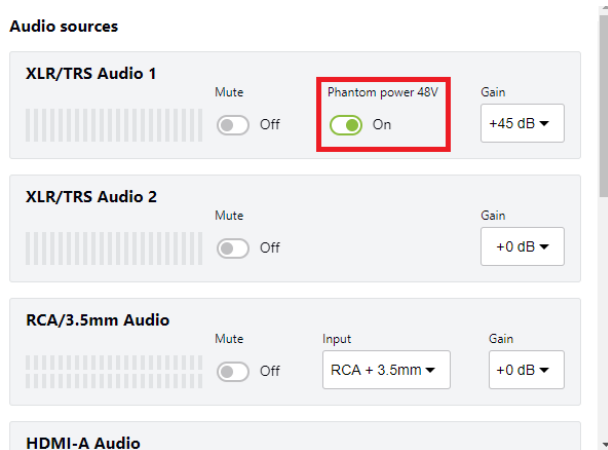

- Select **Apply** if you're using the touch screen or web interface.




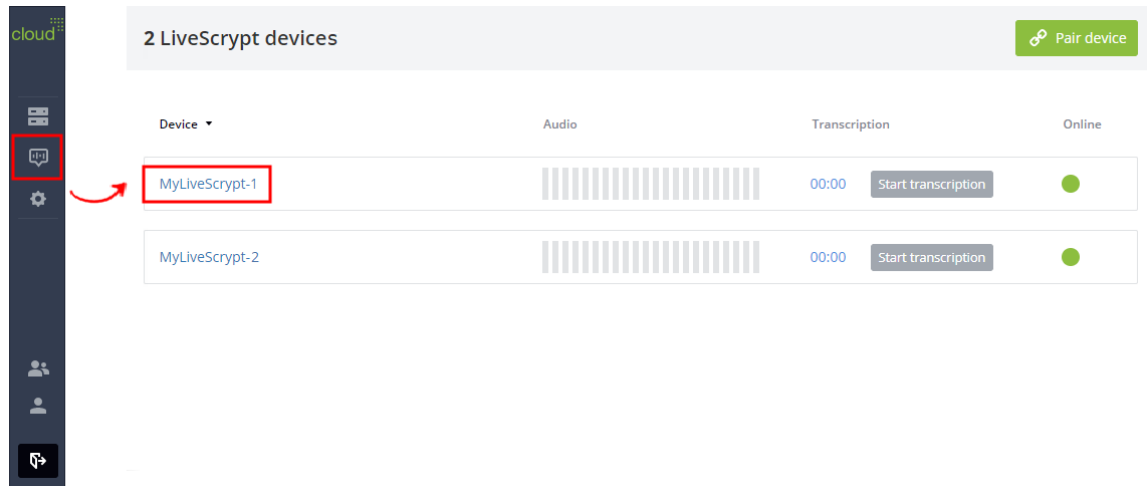
Mute audio

You can mute any audio input source using the touch screen, the web interface, and Epiphan Cloud when LiveScript is paired with your Epiphan Cloud team.

The RCA and 3.5 mm audio input ports share internal audio processing resources. Muting an audio input that shares internal resources mutes all the associated audio sources. To associate audio sources to RCA/3.5 mm Audio, see [Assign audio sources to an input](#).


To mute an audio source:

- Open the device Settings:
 - Using the touch screen and web interface, select **Settings** .
 - Using Epiphan Cloud, select the **LiveScript** devices icon in the side navigation panel, and then select a LiveScript device to open the device **Settings**.




You can also open the LiveScript device settings page from the Devices Dashboard when you click the LiveScript device name or click the three dots in the row for the LiveScript device and select **Settings**.


- From the **Settings**, select **Audio**. The Audio menu opens.



- Toggle the **Mute** switch On or Off for the audio source.

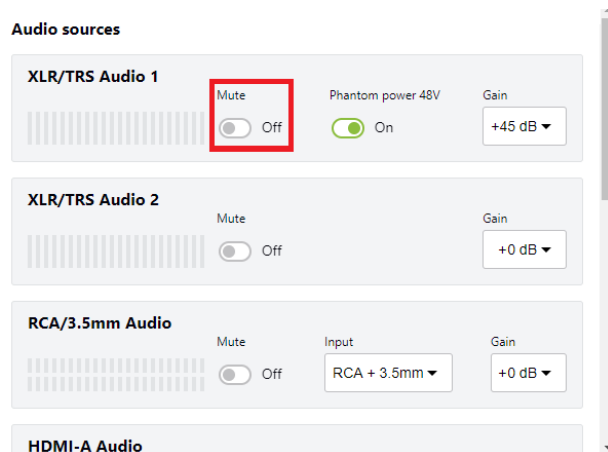

- Select **Apply** if you're using the touch screen or web interface.



Assign audio sources to an input

Some audio input ports on your LiveScript device share internal audio processing resources and are listed together in the user interface.

The audio sources that share resources are:

- RCA (left and right ports)
- 3.5 mm (stereo port)


In the user interface, both the RCA and 3.5 mm audio sources appear under the label **RCA/3.5 mm Audio** and both sources are enabled at their input ports by default. You can change that using the touch screen, the web interface, and Epiphan Cloud when your LiveScript device is paired with your Epiphan Cloud team.


Choosing one audio source for the shared input disables the other audio source. This means that when you add gain to RCA/3.5 mm Audio, only the audio source you assign to RCA/3.5 mm Audio has gain applied and is activated at the input port. The other port is disabled.



To avoid unwanted signal noise on the RCA ports, we recommend adding no more than 12dB of gain when RCA or XLR+3.5mm is selected.

To assign the audio source to an input:

1. Open the device Settings:
 - a. Using the touch screen and web interface, select **Settings** .
 - b. Using Epiphan Cloud, select the **LiveScript** devices icon in the side navigation panel, and then select a LiveScript device to open the device **Settings**.

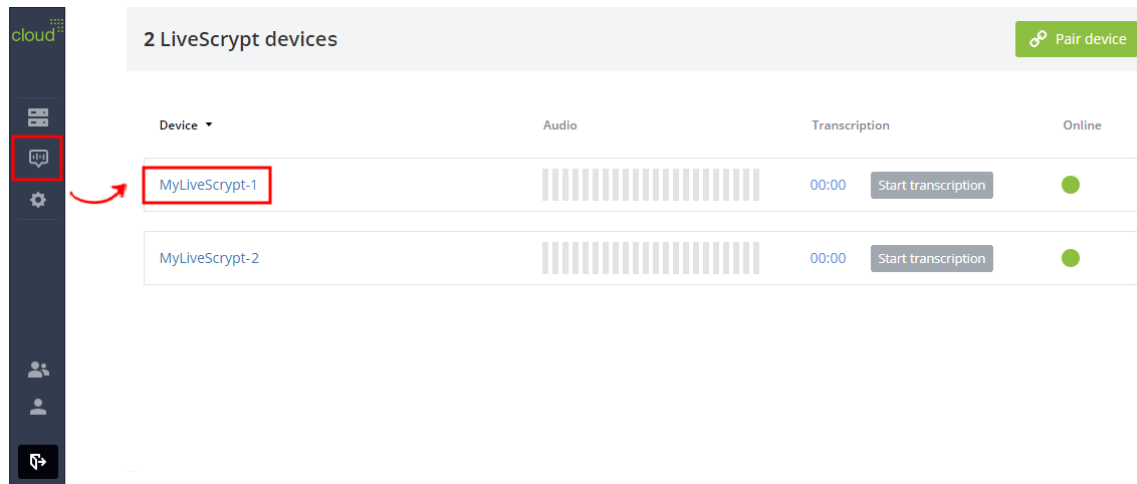




You can also open the LiveScript device settings page from the Devices Dashboard when you click the LiveScript device name or click the three dots in the row for the LiveScript device and select **Settings**.


2. From the **Settings**, select **Audio**. The Audio menu opens.



3. For the **RCA/3.5 mm Audio** source, select the audio source option from the **Input** drop-down menu.

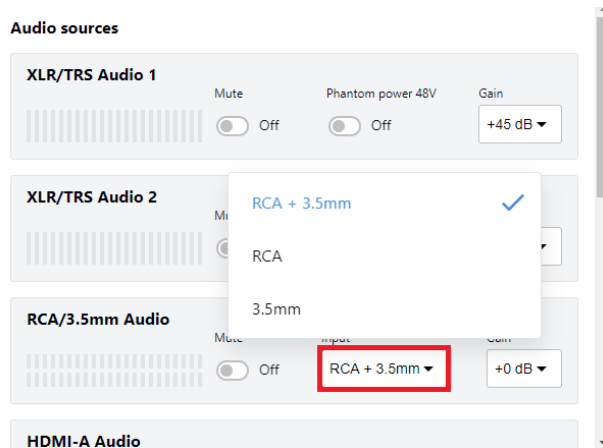

4. Select **Apply** if you're using the touch screen or web interface.



System network options

If you went through the Get started section, you should already be connected to the network. This section describes the network and system options available from the touch screen, the web interface, and Epiphan Cloud when your LiveScript device is paired.

Topics:

- [Network ports used by LiveScript](#)
- [Access system information](#)
- [Rename the LiveScript device](#)
- [Turn DHCP on or off](#)
- [Set up a static IP address](#)
- [Set the date, time, and zone](#)
- [Setup local NTP or another synchronization server](#)

Network ports used by LiveScript

Do not block IP traffic over the default outgoing and incoming network ports that the LiveScript device uses. For LiveScript to operate properly, make sure your firewall is configured to open the following ports for read/write privileges. Blocking a port will cause the service that uses that port to fail.

Outbound ports:

- **HTTP Port 80** - used by the local web admin page.
- **HTTPS port 443** - used to communicate with the LiveScript cloud transcription service.

Incoming ports:

- **TCP port 22** - SSH used for remote support.
- **TCP/UDP port 123** - used for NTP time synchronization.

Access system information



In the LiveScript device settings, you can access system information from the touch screen, the web interface, or using Epiphan Cloud when the device is paired with your Epiphan Cloud team.

The following table lists and describes the system information you can access.

Table 6 System information accessed from the touch screen and web interface

Item	Description
Device name	A name for this LiveScript device is displayed. You assign the device a name when you pair the device with your Epiphan Cloud team.
Serial number	The manufacturer's serial number is displayed.
Device ID	This is the device ID that is also the pairing code that is used to pair this LiveScript device with your Epiphan Cloud team.
Firmware version	The firmware version of the LiveScript device is displayed.
Network settings	This section displays the MAC address, IP address, network mask, default gateway, and includes settings to enable DHCP or set a static IP address for the LiveScript device. See Turn DHCP on or off .
Date and time	This section contains settings for the time zone, date and time, NTP server, and other time synchronization protocol settings.


For Epiphan Cloud, only a subset of system parameters are displayed. You can also select **Remote Web Admin** to access the web interface from Epiphan Cloud.


 Output	 System
IP Address	192.168.1.8
MAC Address	74:FE:48:28:7F:AF
Serial number	48287FAF
Firmware version	0.0.49762
Remote Web Admin	

This procedure applies to all three interfaces. For instructions on how to access the web interface or Epiphan Cloud, see [User interfaces](#).

To access system information:


1. Open the device Settings, do one of the following:

- Using the touch screen or web interface, select **Settings** .
- Using Epiphan Cloud, select the **LiveScript** devices icon in the side navigation panel, and then select a LiveScript device to open the device **Settings**.

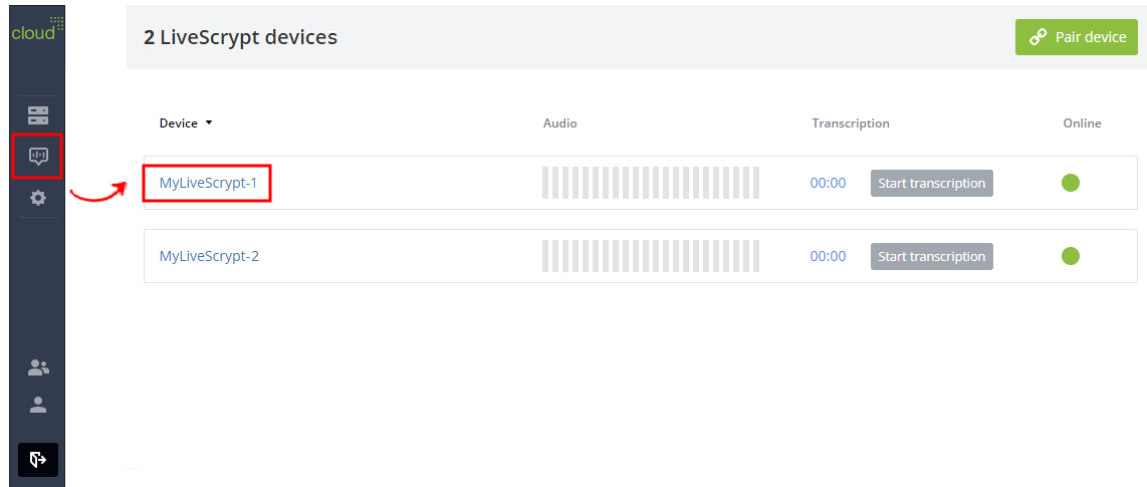


You can also open the LiveScript device settings page from the Devices Dashboard when you click the LiveScript device name or click the three dots in the row for the LiveScript device and select **Settings**.

2. From the **Settings**, select **System** to open the System menu.



3. Use the scroll bar to navigate the menu.

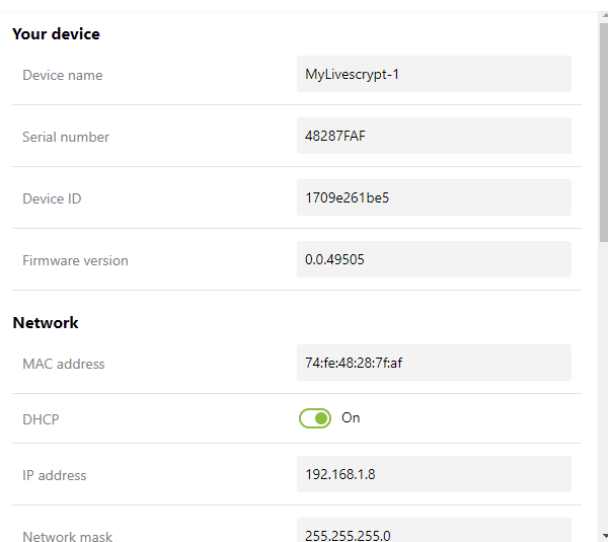

Rename the LiveScript device

In the LiveScript device settings, you can access system information and view the device name using the touch screen, the web interface, or Epiphan Cloud when the device is paired with your Epiphan Cloud team.


When you pair the device to your Epiphan Cloud account, you can assign the device a unique name using alphanumerical characters and spaces. You can change the name of your LiveScript device at any time from the device's settings page in Epiphan Cloud. For instructions on how to access Epiphan Cloud, see [User interfaces](#).



You can use alphanumerical characters and spaces in the device name; however, we recommend using underscores to separate words instead of spaces. Common character sets for Western and Central European languages, Nordic languages, and Russian should display correctly for the device name in the user interface on the LiveScript device. The device name should not include the following special characters: ^ < > / \ ? * : " |


To change the LiveScript device name using Epiphan Cloud:

1. Select the **LiveScript** devices icon in the side navigation panel, and then select a LiveScript device to open the device **Settings**.

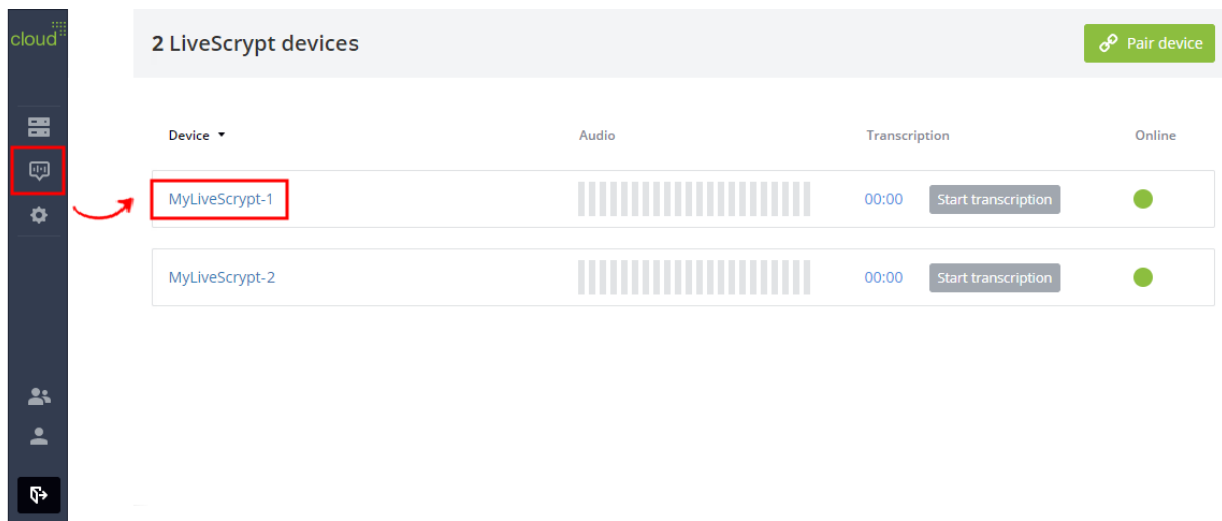

You can also open the LiveScript device settings page from the Devices Dashboard when you click the LiveScript device name or click the three dots in the row for the LiveScript device and select **Settings**.

2. At the top of the page, select the device name that appears in the header bar and enter a new name.

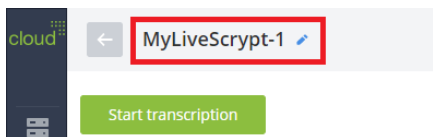

3. Click outside the device name field to save the changes.


Turn DHCP on or off

In the LiveScript device settings, you can turn DHCP on or off. If your network uses a DHCP server to identify devices that are connected to the network, then the LiveScript device dynamically obtains an IP address when you power on the device. The network mask and default gateway are also obtained automatically from the network client. DHCP is enabled by default.


This procedure applies to the touch screen and web interface. For instructions on how to access the web interface, see [Using the web interface](#).

To turn DHCP on or off:


1. Select **Settings** , and then select **System** to open the System menu.



2. In the Network section, toggle the DHCP switch on or off.

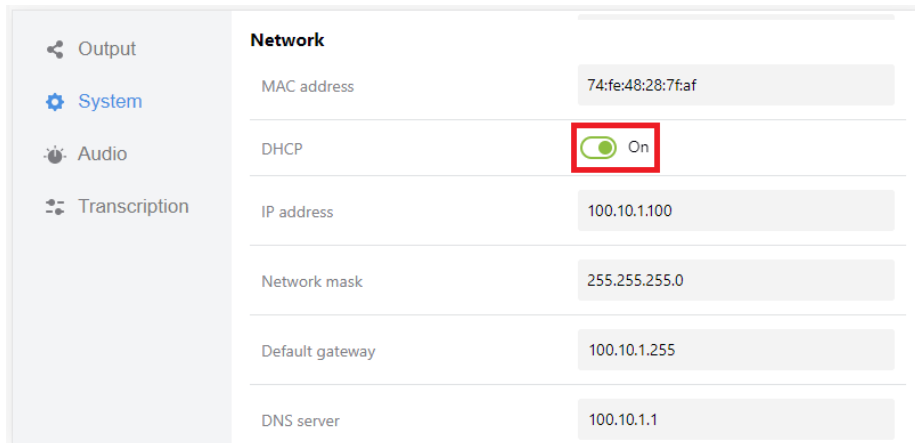

3. Select **Apply**.



Set up a static IP address

If your network doesn't use a DHCP server to dynamically identify devices connected to the network, you can manually assign the LiveScript device a static IP address and set the network mask, default gateway, and DNS server values using the touch screen or web interface. Only IPv4 addresses are supported. LiveScript does not support IPv6.


Table 7 Static IP Address Fields

Label	Description
IP Address	Obtain a static IP address to assign the LiveScript device from your network administrator. Only IPv4 addresses are supported. LiveScript does not support IPv6 addresses.
Network Mask	Also called the subnet mask, this value denotes a range of IP addresses. Obtain this from your network administrator, from another computer on the same subnet, or calculate the value using an online subnet calculator.
Default gateway	The network node that serves as an access point to the rest of the network. This value cannot be blank unless you are using DHCP. Specify the system's IP address if you don't have a default gateway on your network.
DNS Server	The domain name system server (DNS server) translates human-readable hostnames into corresponding IP addresses. Specify the system's IP address if you don't have a DNS server on your network. This value cannot be blank unless you are using DHCP.


This procedure applies to the touch screen and web interface. For instructions on how to access the web interface, see [Using the web interface](#).

To set up a static IP address:

1. Select **Settings**  and then select **System** to open the System menu.



2. In the Network section, toggle the DHCP switch off.

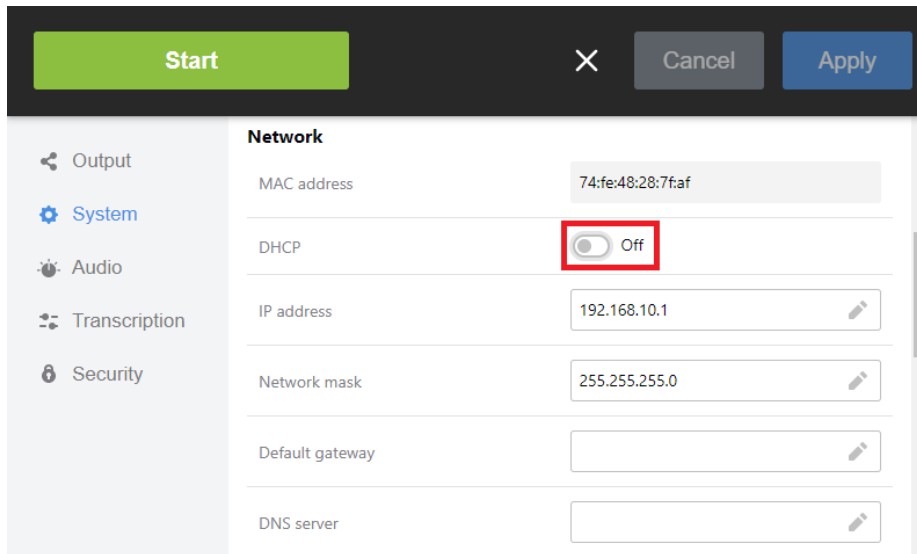


3. Enter a static IPv4 address in the **IP address** field. You can also add or modify the **Network mask**, **Default gateway**, and **DNS server** values.



The default gateway and DNS Server fields cannot be left blank. If you do not have a default gateway or a DNS server for your network, enter the static IP address in those fields.


4. Select **Apply** and reboot if prompted.

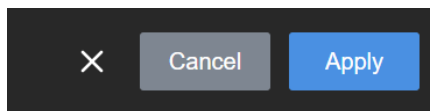


Set the date, time, and zone


The LiveScript device's date and time are used for the transcription files when they're archived. You can set the date, time, and time zone for your device using the touch screen and the web interface. For instructions on how to access the web interface, see [Using the web interface](#).

To set the date, time, and zone for the LiveScript device:


1. Using the touch screen or web interface, select **Settings** .
2. From the Settings menu, select **System** to open the System menu.



3. Scroll to the **Date and time** section and do the following:
 - a. In the **Time Zone** field, select a time zone from the drop-down menu.
 - b. In the **Time** field, enter the time using the format **hh:mm:ss**.
 - c. In the **Date** field, enter the date using the format **yyyy-mm-dd**.

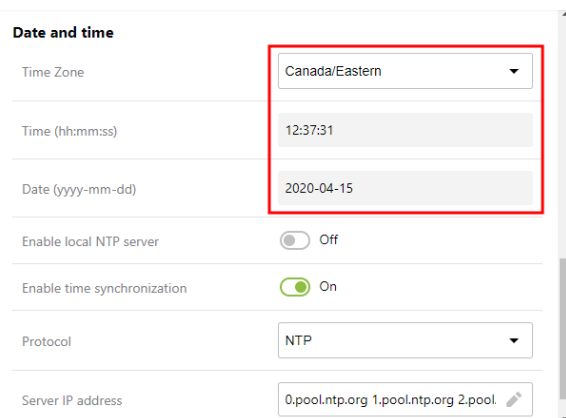A screenshot of the 'Date and time' settings screen. The screen has a white background with a light gray border. At the top, the title 'Date and time' is in bold. Below it, there are several settings: 'Time Zone' with a dropdown menu showing 'Canada/Eastern'; 'Time (hh:mm:ss)' with a text field showing '12:37:31'; 'Date (yyyy-mm-dd)' with a text field showing '2020-04-15'; 'Enable local NTP server' with a toggle switch set to 'Off'; 'Enable time synchronization' with a toggle switch set to 'On'; 'Protocol' with a dropdown menu showing 'NTP'; and 'Server IP address' with a text field showing '0.pool.ntp.org 1.pool.ntp.org 2.pool.ntp.org'. A red rectangular box highlights the 'Time Zone', 'Time', and 'Date' fields.


4. Select **Apply**.




Setup local NTP or another synchronization server


The LiveScript device is setup to use a web NTP server for time synchronization by default. You can select a different synchronization protocol, enter a different server URL, or setup the LiveScript device to get it's time synchronization from a local NTP server using the touch screen and the web interface. The device supports NTP, PTPV1, and RDATE protocols. For instructions on how to access the web interface, see [Using the web interface](#).

To setup the synchronization server for the LiveScript device:


1. Using the touch screen or web interface, select **Settings** .
2. From the **Settings**, select **System** to open the System menu.



3. Scroll to the **Date and time** section and do any of the following:
 - a. To enable using the local NTP server, toggle the **Enable local NTP server** switch On.
 - b. To disable time synchronization, toggle the **Enable time synchronization** switch Off.
 - c. To change the time server protocol, select a different one in the **Protocol** field.
 - d. To change the time server URL, enter a new one in the **Server IP address** field.

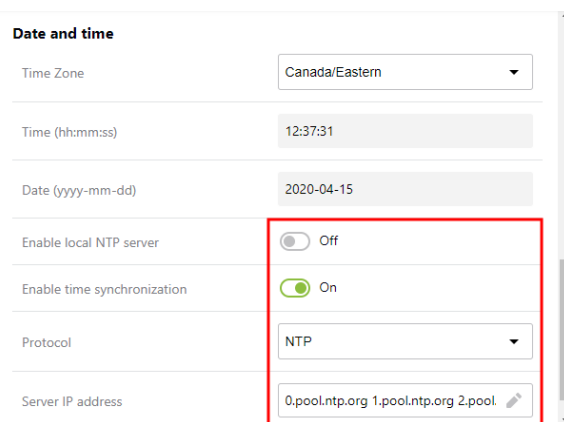A screenshot of the "Date and time" settings screen. The screen has a white background with a light gray border. It contains several settings: "Time Zone" with a dropdown menu showing "Canada/Eastern"; "Time (hh:mm:ss)" with a text field showing "12:37:31"; "Date (yyyy-mm-dd)" with a text field showing "2020-04-15"; "Enable local NTP server" with a toggle switch set to "Off"; "Enable time synchronization" with a toggle switch set to "On"; "Protocol" with a dropdown menu showing "NTP"; and "Server IP address" with a text field showing "0.pool.ntp.org 1.pool.ntp.org 2.pool.ntp.org" and a small edit icon. A red rectangular box highlights the "Enable local NTP server", "Enable time synchronization", "Protocol", and "Server IP address" settings.

4. Select **Apply**.



Security options


LiveScript offers some security features to keep your device safe. Be sure to record passwords in a safe location.

- [Set touch screen PIN and lock](#)
- [Set the web interface password](#)

Set touch screen PIN and lock


To protect your LiveScript device from unauthorized access, you can set a 4-character PIN security code and lock the touch screen using the touch screen and web interface. By default, a PIN is not set.

When locked, users must enter the four-digit PIN to unlock the touch screen to access the LiveScript device. Once unlocked, the touch screen remains unlocked and the password is reset to none. Simply repeat the procedure the next time you want to lock the touch screen.

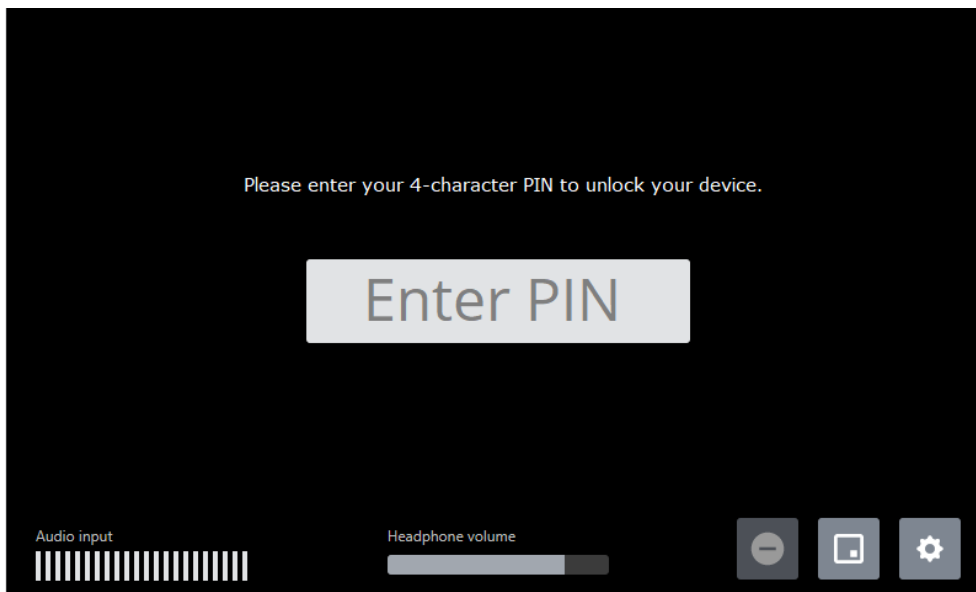

You can use the web interface and Epiphan Cloud to configure and control the LiveScript device while the touch screen is locked. Using the web interface, you can even change the PIN while the touch screen is locked - just in case the PIN is forgotten.

To configure a 4-character PIN and lock the touch screen using the touch screen and web interface:

1. Select **Settings**  to open the device Settings and then select **Security**. The Security menu opens.



2. Enter up to four characters in the **PIN code** field. Alphanumeric characters, spaces, and special characters are supported.

Touch screenLock touch-screen

Set a PIN-code to enable locking of the touch screen

PIN code (up to 4 characters)


3. Do one of the following:
 - a. Select **Apply** to save the password.
 - b. Select **Lock touch screen** and confirm **Yes, lock it** to immediately apply the 4-character PIN and lock the touch screen.


Set the web interface password

When you login to the web interface for the first time, the default user name is **admin** and no password is assigned. Just enter **admin** and leave the password field blank. For higher security, we recommend that you assign a password using the touch screen or web interface as soon as possible.

Passwords are case sensitive and can use all alphanumeric keys in the ASCII range. Passwords can be up to 255 characters long, but should not include any spaces. Contact your system administrator for your organization's specific password requirements.

To set or change the password:

1. Select **Settings**  to open the device Settings and then select **Security**. The Security menu opens.



2. Enter a password in the **Password** field using alpha-numeric characters.


Web interface

To access the device using the Web interface, go to: **http://192.168.101.138**

Username	<input type="text" value="admin"/>
Password	<input type="password" value="*****"/>

Reboot the device after changing the password.

3. Select **Apply**.



Billing and storage

You can modify your billing information, view usage, and content storage options using Epiphan Cloud.


Topics:

- [Managing your account and changing your plan](#)
- [Display QR code](#)

Managing your account and changing your plan

When you first sign up for an Epiphan Cloud account, you're automatically assigned a default team. To use LiveScript transcription services, you need to sign up for the LiveScript transcription service. For instructions to access your account and set up services, see [Create an account and enable transcription services](#).

In Epiphan Cloud, you can see the plan that's associated with your team on your team's Billing page.

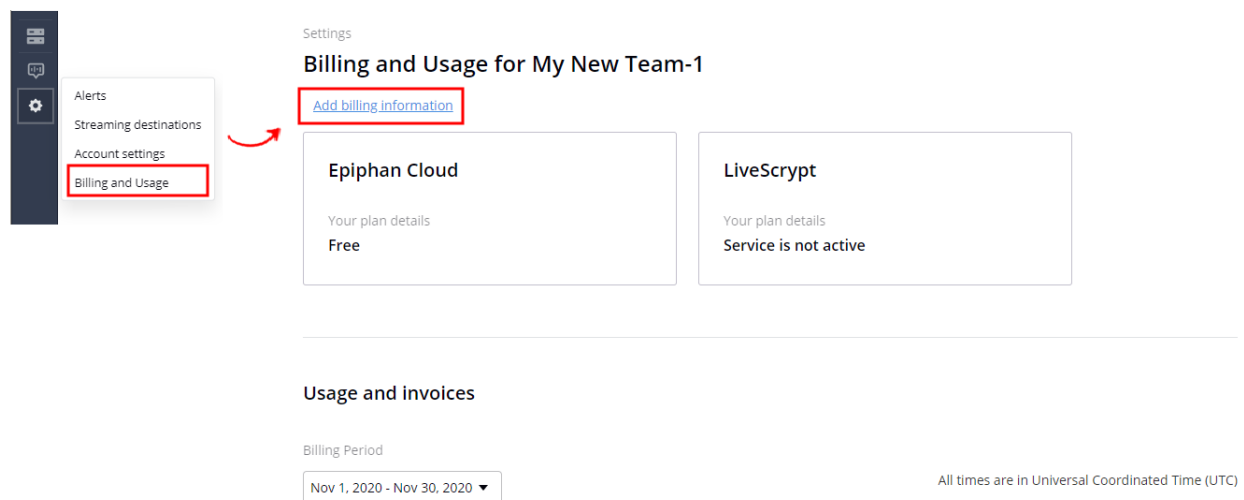

Only the Epiphan Cloud account owner can add or modify billing information, plans, and change ownership of the account. A LiveScript plan can be setup for individual teams by the owner of that team.

At the time of publishing this guide:

- The cost is \$9.95 USD per transcription hour with a one hour minimum.
- The first five minutes of a transcription session is free. After five minutes, you're billed a minimum of one hour.
- For sessions longer than one hour, additional charges at the rate of \$9.95 USD per transcription hour applies. For example, a session that is 61 minutes long is billed for two transcription hours.

- Your credit card is charged once at the end of the 30-day billing cycle. The billing cycle begins the date credit card information was added to your account to enable the LiveScript transcription service for a team.

For the current terms and cost for the LiveScript live transcription service, go to:

<https://www.epiphan.com/products/livescript/>

You can create multiple teams and assign them different services. Each team is billed separately. Transcription services are tracked per team and charged monthly to the credit card information that was provided when you assigned the service to the team. It can take up to 24 hours for a charge to be processed and appear in your team's usage and billing.

Only the owner of a team can change the team's services and billing information, or transfer ownership of the team to another team member. When you transfer ownership of a team to another team member, you have the option to transfer the billing information as well. However, the current billing information will continue to be used until such time as the new owner accepts the transfer of the team and billing information. To change plans or transfer a team, see the [Epiphan Cloud user guide](#).

Deleting a team cancels the service assigned to that team. When a team is deleted, a final charge is made to the credit card specified in the billing information for that team if there happens to be any outstanding charges.

Storage and managing your footage

LiveScript transcription services performs transcription in the cloud. You can access the transcription files at any time to ensure you don't lose important content.

We recommend regularly downloading your transcription files or renaming them for easier retrieval. For details on how to download .SRT and .TXT files, see [Download and delete .SRT and .TXT files](#).

Transcription files remain a part of a team's assets until you decide to delete them.

Troubleshooting and support

Your LiveScript device comes with a one-year complimentary support plan starting one year from the original product shipment date. You can purchase a 2-year extended support plan from Epiphan Video for a total of three years of product support from the original product shipment date:

- **SupportPlan** offers a 2-year support extension
- **SupportPlan+** offers a 2-year support extension plus remote troubleshooting support

For more information about service plans, see www.epiphan.com/supportplan.

Before you contact Epiphan support, check the troubleshooting topic:

- [Troubleshooting Quick Reference](#)
- [Power down and system restart](#)

To contact Epiphan support:

- **Email:** support@epiphan.com
- **Online chat:** www.epiphan.com/support (Monday to Friday between 9am and 5pm Eastern)
- **Call:** 1-877-599-6581 / 613-599-6581



Remote troubleshooting support allows the Epiphan support team access to your LiveScript device to do things like reset lost admin passwords. No private information is sent to Epiphan maintenance servers during a remote session.

Troubleshooting Quick Reference

Use the follow quick reference table for help if you are experiencing problems or unexpected behavior from LiveScript.

Table 8 *Troubleshooting Quick Reference*


Problem	Action(s) to Resolve
No sound is coming from an audio source.	<p>Verify that you are using the correct audio input , see Audio inputs.</p> <p>OR</p> <p>Check if there are any bars registering audio in the audio meter, see Monitor audio.</p> <p>OR</p> <p>Check the touch screen interface for audio monitoring or use the 3.5 mm audio jack on the front of the LiveScript device to verify audio, see Monitor audio.</p>
There's no audio from my SD SDI source.	<p>Embedded audio from sd-SDI sources are not supported. Change your SDI source to use a different resolution up to 3G.</p>
I can't hear the audio in my headphones.	<p>This might be a gain issue due to the type of audio source you're using. See Adjust audio gain for recommended gain to add for various types of audio sources.</p>
The attached monitor is not recognized.	<p>Legacy Ubuntu systems have poor support for HDMI 2.0 and don't recognize a monitor being plugged into the LiveScript device. Try plugging the monitor into the device before you turn the LiveScript device on.</p>
There's noticeable delay in the headphones.	<p>It's normal for there to be a slight delay due to the audio signal being processed by the LiveScript device.</p>
LiveScript doesn't boot up when powered on.	<p>Confirm that the power cable is connected to a working power source. If LiveScript is still not powering up, remove any HDMI cables connected to the output ports and try again. If you're still unable to power up, contact Epiphan support.</p>
System is not starting up correctly.	<p>Ensure there are no USB sticks inserted into the USB ports during power up. They may be conflicting with the internal hard drive, causing an unexpected behavior.</p>


View network diagnostics

From the System menu using the touch screen and web interface, you can view network diagnostics for your LiveScript device to help you troubleshoot connection issues. Diagnostics include:


- If the network cable is connected.
- Can the DNS be resolved.
- Internet connection (HTTP/HTTPS) status.
- Remote login connection status.
- Epiphan Cloud connection status.

To view the network diagnostics:

1. Using the touch screen and web interface, select **Settings** .
2. From the **Settings**, select **System**. The System menu opens.



3. In the **Network** section, select **network diagnostics**.

Network diagnostics 		Refresh
Network cable	✓ connected	
DNS	✓ can resolve DNS	
Internet connection (HTTP)	✓ ok	
Internet connection (HTTPS)	✓ ok	
Remote login connection	✓ established	
AVStudio connection	✓ established	


4. (Optional) Select **Refresh** to refresh the diagnostics.

Power down and system restart

You can power down and restart the LiveScript device using the power button located on the rear panel.



Alternatively, you can reboot the LiveScript device from the LiveScript device **Settings** page in Epiphan Cloud.

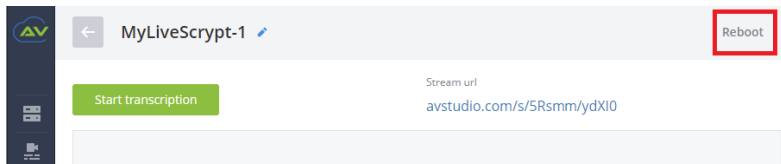

Specifications

Topics include:

- [Audio inputs](#)
- [Vesa mounting the device](#)
- [Tech specs](#)

Audio inputs

Audio from all inputs are combined into a single mono signal that's sent to the LiveScript transcription service in the cloud. The following table lists the sources of audio you can connect to the LiveScript device:

Table 9 LiveScript Audio Input Sources

Input port	Qty	Details
SDI ¹	1	Linear PCM audio/video input. Supports up to 3G-SDI signals.
HDMI™	2	Linear PCM audio/video input, non-HDCP protected. DVI-I (using an adapter) is single link.
USB 3.0	2	Linear PCM audio/video inputs on the rear panel accept non-HDCP protected content. Use to connect a single UAC or UVC device, such as a USB microphone or a web camera.
RCA ²	2	RCA consumer line-level audio inputs function as a mono pair (-10 dBV).
3.5 mm ²	1	Mic-level input to connect a passive or active stereo electret microphone (unbalanced)
XLR ³	2	<p>Combo XLR/TRS audio inputs operate as individual mono inputs.</p> <p>XLR inputs accept balanced and unbalanced, mic level and professional line level signals with a maximum of up to 12.3 VRMS, +24 dBu.</p> <p>Mic-level (balanced) inputs supply optional 48 V phantom power across both XLR ports. See Enable or disable phantom power.</p>
1/4" TRS ³	2	Combo XLR/TRS audio inputs operate as individual mono inputs.



Connecting devices that are not designed for phantom power when phantom power is enabled on the XLR ports can seriously damage those devices. Always check the phantom power LED before connecting devices to the XLR ports. A direct box can be used to provide the correct mic-level signal to the XLR port and offers some isolation protection in case of accidental exposure to 48 V phantom power.

Input port	Qty	Details
		The ¼" TRS inputs accept balanced and unbalanced, pro line level signals (+4.0 dBu) up to to 12.3 VRMS, +24 dBu.

¹ SD-SDI audio is not supported


² RCA/3.5 mm includes audio signals from the RCA audio pair and the 3.5 mm stereo audio inputs by default. You can disable one or the other using the touch screen, the web interface, or Epiphan Cloud when your LiveScript device is paired to your Epiphan team, see [Assign audio sources to an input](#).

³ You cannot use both XLR audio inputs and the ¼" TRS audio inputs at the same time.

Vesa mounting the device

The rear panel of LiveScript has vesa mounting holes to fit a standard, 75mm × 75mm vesa mount. Use four M4 screws with a maximum length of 5mm to mount the plate to the rear panel of LiveScript.

75mm x 75mm Hole Pattern

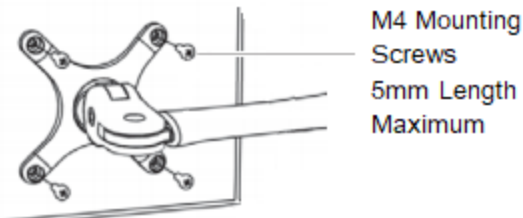

Do not insert screws longer than the recommended 5mm. Using longer screws can damage the device.

Tech specs

The input and output connectors are listed for LiveScript.

For the most up-to-date product specifications and information, go to www.epiphan.com/LiveScript.

Table 10 Specifications for LiveScript

Video inputs ²	Local video inputs	(1) 3G-SDI (2) HDMI™ 1.4a ¹ (1) USB 3.0 (UVC) - rear panel
	Connectors	(2) HDMI type A (female) (1) BNC (female)

		(2) USB-A (female) - rear panel (1) RJ-45 (female)
	Standard resolutions	PAL, PAL wide, NTSC, NTSC wide
	Resolution range	640×480 to 1920×1200
	Frame rate	Up to 60 fps
	Maximum cable length for 3G SDI	300 ft
	Maximum cable length for USB 3.0	6 ft
Audio inputs	Analog audio inputs	(2) XLR mic level/pro line level (+4.0 dBu) up to 12.3 V ^{RMS} , +24 dBu (balanced/unbalanced, mono) - Phantom optional (2) 1/4" TRS pro line level (+4.0 dBu) up to 12.3 VRMS, +24 dBu (balanced/unbalanced, mono) (1) RCA consumer line level (-10 dBV) mono pair (1) 3.5 mm stereo input for electret microphones (unbalanced) converted to mono
	Connectors	(2) XLR/TRS combo jacks (female) (2) RCA (female) (1) 3.5 mm (female) - rear panel
	Digital audio inputs	(1) SDI ³ (2) HDMI (2) USB (rear panel)
	Connectors	(2) HDMI type A (female) (1) BNC (female) (2) USB-A (female) - rear panel
	Gain control	0 dB to +60 dB (dependent on audio port type)
	Mute	Yes

Video output	Signal types	(1) HDMI 1.4a
	Connectors	(1) HDMI
	Resolution ranges	Confidence monitoring: 480p to 1920×1200p
	Frame rate	Up to 60 fps
Audio output	Analog audio output	(1) 3.5 mm stereo headphone jack - front panel
Transcription	Languages	Google's supported basic ASR speech recognition languages: https://cloud.google.com/speech-to-text/docs/languages
	Transcription file formats	SRT, TXT
	Profanity filter	Yes (optional)
	Punctuation	Yes (optional)
	NAICS codes	Yes (optional)
Communication	USB standards	USB 1.1, USB 2.0, and USB 3.0 HDCP compliant
	Ethernet host port	(1) RJ-45 (female)
	Ethernet data rate	10/100/1000 Base-T, half/full duplex with autodetect
	Protocols	DHCP, HTTP, HTTPS
Confidence monitor, administration, and control interface	Touch screen	7 inch touch screen monitor (built in) resolution: 800x480. Built-in touch screen for confidence monitoring, configuration, and control.
	Web interface	Remote web-based user interface to access the same configuration and controls as the touch screen.
	Epiphan Cloud	Cloud-based device management and control portal that lets users manage and operate their LiveScript devices, as well as other Epiphan devices.
Security	4-digit PIN	PIN protected touch screen access (optional)
	Password protected web access	Password protected web interface and secure Epiphan Cloud remote access.

General	Power supply	External: 1.5 A, 100-240 VAC, 50 to 60 Hz (60W); 1.3 A, 100-240 VAC, 50 to 60 Hz (84W)
	Input power rating	12 VDC, 5.0 A (maximum / 60W PSU); 12 VDC, 7.0 A (maximum / 84W PSU)
	Operating temperature	32° to 104° F (0° to 40° Celsius)
	Cooling	Fan air flow: Left to right
	Enclosure	Metal
	Form factor	Portable desktop model. VESA mountable
	Dimensions (W × D × H)	10 1/4" × 6 3/4" × 2 3/8" (261 mm × 172 mm × 60 mm)
	Weight	3.8 lbs (1.7 kg)
Regulatory compliance	FCC compliance: Part 15	
	CE compliance:	
	Directive 2014/30/EU - Electromagnetic Compatibility Directive 2014/35/EU - Low Voltage Directive Directive 2011/65/EU - RoHS	
Time synchronization	NTP, PTPV1, RDATE	
Country of origin	Made in Taiwan	

¹HDCP compliant.

²For extracting embedded audio.

³SD-SDI audio is not supported.

Software license

ATTENTION: THE SOFTWARE AND DOCUMENTATION PROVIDED UNDER THIS AGREEMENT ARE BEING LICENSED TO YOU BY EPIPHAN SYSTEMS INC. ("LICENSOR") AND ARE NOT BEING SOLD. THIS AGREEMENT CONTAINS LIMITATIONS ON REPRESENTATIONS, WARRANTIES, CONDITIONS, REMEDIES, AND LIABILITIES THAT ARE APPLICABLE TO THE SOFTWARE AND DOCUMENTATION.

Epiphan Systems Inc.

Software License

IMPORTANT: BEFORE DOWNLOADING, INSTALLING, OR USING THE SOFTWARE AND DOCUMENTATION, PLEASE CAREFULLY READ THIS AGREEMENT WHICH CONTAINS THE TERMS AND CONDITIONS UNDER WHICH YOU ARE ACQUIRING A LICENSE TO USE THE SOFTWARE AND DOCUMENTATION. IF YOU DO NOT ACCEPT THE TERMS AND CONDITIONS OF THIS AGREEMENT PLEASE DO NOT DOWNLOAD, INSTALL, OR USE THE SOFTWARE AND DOCUMENTATION AND PROMPTLY RETURN OR DESTROY THE SOFTWARE AND DOCUMENTATION. IF YOU DOWNLOAD, INSTALL, OR USE THE SOFTWARE AND/OR DOCUMENTATION, YOU WILL HAVE ACCEPTED AND AGREED TO THESE TERMS AND CONDITIONS. THE SOFTWARE, HARDWARE AND DOCUMENTATION ARE ALSO PROTECTED BY COPYRIGHT LAWS AND INTERNATIONAL COPYRIGHT TREATIES, AS WELL AS OTHER INTELLECTUAL PROPERTY LAWS. IF YOU ARE AN AGENT OR EMPLOYEE OF AN ENTITY, YOU REPRESENT AND WARRANT THAT (I) THE INDIVIDUAL ACCEPTING THIS AGREEMENT IS DULY AUTHORIZED TO ACCEPT THIS AGREEMENT ON SUCH ENTITY'S BEHALF AND TO BIND SUCH ENTITY, AND (II) SUCH ENTITY HAS FULL POWER, CORPORATE OR OTHERWISE, TO ENTER INTO THIS AGREEMENT AND PERFORM ITS OBLIGATIONS UNDER THIS AGREEMENT.

1. Definitions: In this Agreement:

"Agreement" means this Epiphan Systems Inc. Software License;

"API" means an application programming interface;

"Documentation" means the technical publications delivered to You with the Software relating to the installation and operation of the Software and/or Hardware, such as reference, user, installation and technical guides and release notes;

"Epiphan" means Epiphan Systems Inc.;

"Epiphan Hardware Product" means an Epiphan hardware product (including enclosure and mechanical parts, circuitry and electrical and electronic components contained therein) purchased by You, which is intended to be used in conjunction with the licensed Software and Documentation;

"License Key" means a series of computer-generated characters used for the purpose of controlling the operation of Epiphan Hardware Products and/or related Software;

"Software" means the Licensor binary and/or bytecode software and/or firmware programs that are (i) specified in Your Order or that are included with or in the Epiphan Hardware Products specified in Your Order, (ii) are made available to You for download after acceptance of this Agreement, (iii) are packaged with this Agreement, (iv) pre-installed on Epiphan Hardware Products, (v) embed this Agreement in their installer(s) and which are installed after acceptance of this Agreement, or (vi) embed this Agreement in their product documentation. Software also includes the related Documentation;

"You" or "Your" means the individual acquiring the Software license or any entity on whose behalf such individual is acting. In the case of an entity, "You" includes any entity that by majority voting interest controls, is controlled by, or is under common control with You; and

"Your Order" means (i) the web forms provided by Epiphan or its applicable reseller or distributor for ordering Epiphan Hardware Products and related Software licenses, or (ii) written documents executed by Epiphan, or one of its resellers or distributors, and You in respect to Your purchases of Epiphan Hardware Products and/or related Software licenses.

2. Grant of Software License: Subject to the terms and conditions of this Agreement, including payment of any applicable fees specified in Your Order, Licensor grants You a non-exclusive, non-transferable, non-sublicensable, internal license to use the number of copies of the

Software specified in Your Order and to use the Software functions specified in Your Order solely for operation on the Epiphan Hardware Products for which such Software has been designed as specified in the Documentation for such Software. If the number of copies of Software is not specified in Your Order, then the number of copies shall be a reasonable number of copies. You acknowledge and agree that the ability to use certain Software functions is controlled by a Licensing Key and that You will not be able to use such functions unless You have paid the applicable fees charged by Epiphan for the right to use such functions and to receive a Licensing Key to enable such functions. For functions that are controlled by a Licensing String You shall only use that Licensing String with the copy of the Software for which it was issued and You shall not use that copy of the Licensing String with any other copies of the Software that You may have or make. All copies of the Software made by You shall include all trademarks, copyright notices, restricted rights legends, proprietary markings and the like exactly as they appear on the copy of the Software originally provided to You. No other rights in the Software or Documentation are granted to You.

3. Open Source Software: Binary, bytecode and source code versions of certain open source software packages may be embedded in or distributed with the Software ("Open Source Software"). If a separate license agreement for an item of open source software is: delivered to You with the Software; included in the download package for the Software; referenced in any material (including the Documentation) that is included in the download or distribution package for the Software; or listed at www.epiphan.com/opensource, then such open source software shall be Open Source Software and such separate license agreement shall govern Your use of that item or version of such open source software. The Open Source Software may include free software (i.e. software licensed under the GNU Lesser General Public License or other free software licenses) for which the applicable free software license may also require that the source code for such free software be made available to those receiving only executable versions of such free software. If the source code for any free software distributed with the Software is not provided with the Software, then upon request, within a three (3) year period from the original receipt of the binary or bytecode version of such Open Source Software from Licensor, for a fee that shall not exceed Licensor's costs associated with the shipping of the source code for such free software, Licensor will provide a copy of the source code for such free software to You.

4. Restrictions: The terms set forth in this Section 4 are additional conditions to the licenses granted in Section 2. Your right to use the Software is conditioned upon Your timely payment of the full amount of fees due for: (i) the Epiphan Hardware Product(s) on which You want to use the Software; (ii) all support agreements You have entered into with Licensor or any of its distributors and/or resellers; (iii) licensed Software and Documentation.

You shall not reverse engineer, disassemble, reverse translate, decompile or in any other manner decode any Epiphan Hardware Product or Software except to the extent the Software is distributed with any Open Source Software that prohibits the imposition of such a restriction or to the extent the foregoing restriction is expressly prohibited by applicable law notwithstanding a contractual obligation to the contrary. You acknowledge and agree that no rights in respect to the source code of the Software are granted to You. You acknowledge and agree that the rights in respect to use of the Software and Documentation are granted only for use in conjunction with Epiphan Hardware Products. You shall not distribute, lease, rent, grant a security interest in, assign, or otherwise transfer the Software except as expressly provided in this Agreement. You shall not modify or create any derivatives works of the Software or merge all or any part of the Software with another program. Notwithstanding the foregoing, You may call public APIs made available by Epiphan in the Software from applications developed by or on Your behalf provided that such applications do not embed any of the Software other than the minimum linkage materials required to call separately running instances of the Software. You shall not use the Software or make the Software available to any third parties as part of any service bureau, time sharing service, application service provider offering, software-as-a-service offering or any other managed service offering. You shall not disclose any performance, benchmarking, or feature-related information about the Software. You further agree not to disclose, transfer or otherwise provide to any third party any portion of the Software, except as expressly permitted herein.

Some Epiphan Hardware Products and Software embed third-party APIs that integrate with third-party party services ("Third-Party Services") to allow users of such Epiphan Hardware Products and Software to interact with such Third-Party Services for various capabilities offered by such Third-Party Services, such as, and without limitation, authentication, uploading and downloading of video content and other features made available by such Third-Party Services. If You access or use any Third-Party Service and/or related APIs using an Epiphan Hardware Product and/or the Software then You shall comply with all of the terms and conditions for such Third-Party Service and/or related APIs.

5. Disclaimer of Warranties: EXCEPT FOR ANY WARRANTIES THAT MAY BE PROVIDED IN ANY COMMERCIAL AGREEMENT EXECUTED BETWEEN YOU AND LICENSOR (OR BETWEEN YOU AND ONE OF LICENSOR'S RESELLERS OR DISTRIBUTORS), THE EPIPHAN HARDWARE PRODUCTS, SOFTWARE AND/OR DOCUMENTATION ARE PROVIDED "AS IS", WITHOUT ANY REPRESENTATIONS, CONDITIONS, AND/OR WARRANTIES OF ANY KIND. WITHOUT LIMITATION, LICENSOR AND ITS AFFILIATES AND ITS AND THEIR LICENSORS, SUPPLIERS, SUBCONTRACTORS, RESELLERS AND DISTRIBUTORS DISCLAIM ANY AND ALL IMPLIED REPRESENTATIONS, CONDITIONS AND/OR WARRANTIES OF MERCHANTABILITY, MERCHANTABLE QUALITY, NON-INFRINGEMENT, DURABILITY, COMPATIBILITY, TITLE, SATISFACTORY QUALITY AND/OR FITNESS FOR A PARTICULAR PURPOSE WHETHER ARISING BY STATUTE, COURSE OF DEALING, USAGE OF TRADE OR OTHERWISE. EXCEPT AS OTHERWISE EXPRESSLY PROVIDED IN ANY COMMERCIAL AGREEMENT EXECUTED BETWEEN YOU AND

LICENSOR (OR BETWEEN YOU AND ONE OF LICENSOR'S RESELLERS OR DISTRIBUTORS), THE ENTIRE RISK OF THE USE OF THE EPIPHAN HARDWARE PRODUCTS, SOFTWARE AND/OR DOCUMENTATION SHALL BE BORNE BY YOU. EXCEPT AS OTHERWISE EXPRESSLY PROVIDED IN ANY COMMERCIAL AGREEMENT EXECUTED BETWEEN YOU AND LICENSOR (OR BETWEEN YOU AND ONE OF LICENSOR'S RESELLERS OR DISTRIBUTORS), NEITHER LICENSOR NOR ANY OF ITS AFFILIATES NOR ANY OF ITS OR THEIR LICENSORS, SUPPLIERS, SUBCONTRACTORS, RESELLERS AND/OR DISTRIBUTORS MAKE ANY REPRESENTATIONS OR PROVIDE ANY CONDITIONS AND/OR WARRANTIES ABOUT THE SUITABILITY OF THE EPIPHAN HARDWARE PRODUCTS, SOFTWARE, SERVICES AND/OR DOCUMENTATION. NEITHER LICENSOR NOR ANY OF ITS AFFILIATES NOR ANY ITS OR THEIR LICENSORS, SUPPLIERS, SUBCONTRACTORS, RESELLERS AND/OR DISTRIBUTORS MAKE ANY REPRESENTATIONS OR PROVIDE ANY CONDITIONS AND/OR WARRANTIES WHATSOEVER ABOUT ANY INFORMATION AND/OR DATA THAT MAY BE PROCESSED BY OR MADE AVAILABLE USING ANY EPIPHAN HARDWARE PRODUCT AND/OR SOFTWARE OR ABOUT ANY THIRD-PARTY SERVICE THAT MAY BE ACCESSIBLE USING ANY EPIPHAN HARDWARE PRODUCT AND/OR SOFTWARE.

6. LIMITATION OF LIABILITY: NEITHER LICENSOR NOR ANY OF ITS AFFILIATES NOR ANY OF ITS OR THEIR LICENSORS, SUPPLIERS, SUBCONTRACTORS, RESELLERS AND/OR DISTRIBUTORS SHALL HAVE ANY LIABILITY TO YOU OR ANY OTHER PERSON OR ENTITY FOR ANY DAMAGES ARISING FROM THIS AGREEMENT, RELATING TO THE HARDWARE, SOFTWARE OR DOCUMENTATION, OR RELATING TO ANY SERVICES PROVIDED TO YOU BY LICENSOR (INCLUDING ITS AFFILIATES AND ITS AND THEIR LICENSORS, SUPPLIERS, SUBCONTRACTORS, RESELLERS AND/OR DISTRIBUTORS) IN RELATION TO THE EPIPHAN HARDWARE PRODUCTS, SERVICES, SOFTWARE AND/OR DOCUMENTATION FOR ANY INDIRECT, RELIANCE, INCIDENTAL, SPECIAL, PUNITIVE, EXEMPLARY OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOSS OF OR DAMAGE TO DATA, BUSINESS INTERRUPTION, LOSS OF DATA, REPLACEMENT OR RECOVERY COSTS, OR OTHER COMMERCIAL OR ECONOMIC LOSS, WHETHER ARISING FROM CONTRACT, EQUITY, TORT (INCLUDING NEGLIGENCE OR STRICT LIABILITY) OR ANY OTHER THEORY OF LIABILITY, EVEN IF LICENSOR (INCLUDING ITS AFFILIATES AND ITS AND THEIR LICENSORS, SUPPLIERS, SUBCONTRACTORS, RESELLERS AND/OR DISTRIBUTORS) HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR THEY ARE FORESEEABLE. THE LIMITATIONS IN THIS SECTION SHALL APPLY WHETHER OR NOT THE ALLEGED BREACH OR DEFAULT IS A BREACH OF A FUNDAMENTAL CONDITION OR TERM OR FUNDAMENTAL BREACH. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THESE LIMITATIONS MAY NOT APPLY TO YOU. IN NO EVENT SHALL THE TOTAL CUMULATIVE LIABILITY OF LICENSOR (INCLUDING ITS AFFILIATES AND ITS AND THEIR LICENSORS, SUPPLIERS, SUBCONTRACTORS, RESELLERS AND DISTRIBUTORS) TO YOU OR ANY OTHER PERSON OR ENTITY FOR ANY DAMAGES ARISING FROM THIS AGREEMENT, RELATING TO THE EPIPHAN HARDWARE PRODUCTS, SOFTWARE, DOCUMENTATION AND/OR RELATING TO ANY SERVICES PROVIDED TO YOU BY LICENSOR (INCLUDING ITS AFFILIATES AND ITS AND THEIR LICENSORS, SUPPLIERS, SUBCONTRACTORS, RESELLERS AND DISTRIBUTORS) IN RELATION TO THE EPIPHAN HARDWARE PRODUCTS, SOFTWARE AND/OR DOCUMENTATION, EXCEED THE LICENSE FEES PAID BY YOU FOR THE SOFTWARE.

NOTWITHSTANDING ANY OTHER PROVISION IN THIS AGREEMENT, NEITHER LICENSOR NOR ANY OF ITS AFFILIATES OR ITS OR THEIR LICENSORS, SUPPLIERS, SUBCONTRACTORS, RESELLERS AND/OR DISTRIBUTORS SHALL HAVE ANY LIABILITY TO YOU OR ANY OTHER PERSON OR ENTITY WHATSOEVER IN RESPECT TO ANY DIRECT, INDIRECT, RELIANCE, INCIDENTAL, SPECIAL, PUNITIVE, EXEMPLARY OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOSS OF OR DAMAGE TO DATA, BUSINESS INTERRUPTION, LOSS OF DATA, REPLACEMENT OR RECOVERY COSTS, OR OTHER COMMERCIAL OR ECONOMIC LOSS, ARISING FROM OR RELATING TO ANY INFORMATION AND/OR DATA THAT MAY BE PROCESSED BY OR MADE AVAILABLE USING ANY EPIPHAN HARDWARE PRODUCT AND/OR SOFTWARE OR ARISING FROM OR RELATING TO ANY THIRD-PARTY SERVICE THAT MAY BE ACCESSIBLE USING ANY EPIPHAN HARDWARE PRODUCT AND/OR SOFTWARE.

THE DISCLAIMER OF REPRESENTATIONS, WARRANTIES AND CONDITIONS AND LIMITATION OF LIABILITY CONSTITUTE AN ESSENTIAL PART OF THIS AGREEMENT. YOU ACKNOWLEDGE THAT BUT FOR THE DISCLAIMER OF REPRESENTATIONS, WARRANTIES AND CONDITIONS AND LIMITATION OF LIABILITY, NEITHER LICENSOR NOR ANY OF ITS AFFILIATES OR ITS OR THEIR LICENSORS, SUPPLIERS, RESELLERS OR DISTRIBUTORS WOULD GRANT THE RIGHTS GRANTED IN THIS AGREEMENT.

7. Term and Termination: This Agreement shall continue for as long as You use the Software, however, it may be terminated sooner as provided in this Section 7. You may terminate this Agreement by destroying all copies of the Software and Documentation under Your control and providing certification of such destruction to Licensor or by returning the Software to Licensor. Licensor may terminate this Agreement immediately by providing You with written notice if: (a) You are in material breach of any provision of this Agreement, which breach, if capable of being cured, is not cured within thirty (30) days after Licensor gives You written notice thereof; or (b) You have committed a non-curable

material breach of this Agreement. Upon termination You shall destroy all copies of the Software and Documentation. In addition to this Section, the Sections entitled Definitions, Disclaimer of Warranties, Limitation of Liability, Title, Indemnities, High-Risk Activities, Intellectual Property, and General shall continue in force even after any termination of this Agreement. No termination of this Agreement will entitle You to a refund of any amounts paid by You to Licensor or any reseller or distributor or affect any obligations You may have to pay any outstanding amounts owing to Licensor or any reseller or distributor. Upon any termination of this Agreement, Your license to the Software and Documentation will terminate and You shall destroy all copies of the Software and Documentation under Your control and certify such destruction to Licensor.

8. Support and Updates: This Agreement does not grant You the right to any updates or enhancements of the Software or the right to receive any technical support for the Software. Such updates and other technical support services, if available, may be purchased separately from Licensor or one of Licensor's resellers or distributors. Use of any updates or enhancements to the Software provided pursuant to any technical support You may procure from Licensor or one of Licensor's resellers or distributors shall be governed by the terms and conditions of this Agreement. Licensor reserves the right at any time not to release or to discontinue the release of any Software and to alter prices, features, specifications, capabilities, functions, licensing terms, release dates, general availability or other characteristics of the Software.

9. Title: All right, title, and interest (including all intellectual property rights) in, to, and under the Software (including all copies thereof) shall remain with Licensor and its licensors.

10. Indemnities: You shall indemnify, defend and hold Licensor, its affiliates, its and their licensors, suppliers, subcontractors, resellers and/or distributors and all of the directors, officers, employees of all of the foregoing (collectively the "Indemnified Parties") harmless from and against any damages, losses, liabilities, expenses, costs, claims, demands, actions, suits and/or proceedings incurred by the Indemnified Parties as a result of (i) Your use of the Epiphan Hardware Products, Software and/or Documentation, (ii) any use of the Epiphan Hardware Products, Software and/or Documentation on Your behalf, (iii) the use of the Epiphan Hardware Products, Software and/or Documentation by anyone to whom You give the Epiphan Hardware Products, Software and/or Documentation, and/or (iv) the use of the Epiphan Hardware Products, Software and/or Documentation on behalf of anyone to whom You give the Epiphan Hardware Products, Software and/or Documentation, including, without limitation, in all of the foregoing cases, any damages, losses, liabilities, expenses, costs, claims, demands, actions, suits and/or proceedings arising from or relating to any information and/or data that may be processed by or made available using any Epiphan Hardware Product and/or Software or arising from or relating to any Third-Party Service that may be accessible using any Epiphan Hardware Product and/or Software (collectively, each matter falling within any of the foregoing, a "Claim"), including, without limitation, indemnifying, defending and holding the Indemnified Parties harmless from and against any settlements agreed by You in connection with any Claims and/or any damages, costs or other amounts (including reasonable attorneys' fees) awarded to a third party against any of the Indemnified Parties by a court or tribunal of competent jurisdiction in respect to any Claim. If You do not timely defend against or resist a Claim after notice from Licensor, Licensor shall be entitled to investigate, defend, compromise, settle, or otherwise dispose of the Claim, and incur costs in connection therewith, at Your expense, in such manner as Licensor deems in its best interests until a reasonable time after You comply with its obligations under this Section 10. You shall not enter into a settlement of any Claim without the Licensor's written consent unless such settlement is solely for monetary payment by You and contains an express, complete, unconditional release of all of the Indemnified Parties and which does not impose any obligations or restrictions on any of the Indemnified Parties.

11. High-Risk Activities: The Software and Epiphan Hardware Products are not fault-tolerant and are not designed, manufactured or intended for use in or in conjunction with on-line control equipment in hazardous environments requiring fail-safe performance, such as in the operation of nuclear facilities, aircraft navigation systems, air traffic control, or direct life support machines. Licensor, its licensors, suppliers, subcontractors, resellers and distributors specifically disclaim any express or implied representations, warranties and/or conditions for such uses.

12. U.S. Government End-Users: The Software and Documentation are each a "commercial item" as that term is defined at FAR 2.101, consisting of "commercial computer software" and "commercial computer software documentation" as such terms are defined in FAR 12.212, and are provided to the U.S. Government only as commercial end items. Government end users acquire the rights set out in this Agreement for the Software, Epiphan Hardware Products and Documentation consistent with: (i) for acquisition by or on behalf of civilian agencies, the terms set forth in FAR 12.212; or (ii) for acquisition by or on behalf of units of the Department of Defense, the terms set forth in DFARS 227.7202. Use of the Epiphan Hardware Products, Software and Documentation is further restricted by the terms and conditions of this Agreement and the applicable commercial purchase agreement for the Epiphan Hardware Products. For the purposes of any applicable government use, the Epiphan Hardware Products, Software and Documentation were developed exclusively at private expense, and are trade secrets of Epiphan Systems Inc. for the purpose of any Freedom of Information legislation or any other disclosure statute, regulation or provision.

13. Export Restrictions: The Epiphan Hardware Products, Software, Documentation and related information are subject to export and import restrictions. By downloading, installing, or using the Software, Epiphan Hardware Products, Documentation and/or related information, You are representing and warranting that You are not located in, are not under the control of, and are not a national or resident of any country to

which the export of the Epiphan Hardware Products, Software, Documentation and/or related information would be prohibited by the laws and/or regulations of Canada or the United States. You are also representing and warranting that You are not an individual to whom the export of the Epiphan Hardware Products, Software, Documentation or related information would be prohibited by the laws and/or regulations of Canada or the United States. You shall comply with the export laws and regulations of Canada and the United States that are applicable to the Epiphan Hardware Products, Software, Documentation and related information and You shall also comply with any local laws and/or regulations in Your jurisdiction that may impact Your right to export, import, or use the Epiphan Hardware Products, Software, Documentation or related information, and You represent and warrant that You have complied with any such applicable laws and/or regulations. The Epiphan Hardware Products, Software, Documentation and related information shall not be used for any purposes prohibited by export laws and/or regulations, including, without limitation, nuclear, chemical, or biological weapons proliferation. You shall be responsible for procuring all required permissions for any subsequent export, import, or use of the Epiphan Hardware Products, Software, Documentation or related information.

14. Intellectual Property: Epiphan, Epiphan Systems and Epiphan Video are tradenames, trademarks or registered trademarks of Epiphan Systems Inc. in certain countries. All Licensor product names and logos are trademarks or registered trademarks of Epiphan Systems Inc. in certain countries. All other company and product names and logos are trademarks or registered trademarks of their respective owners in certain countries. You shall not disclose, transfer or otherwise provide to any third party any portion of the Software, except as expressly permitted in this Agreement.

15. General: This Agreement is the entire agreement between You and Licensor in respect to the Software, superseding any other agreements or discussions, oral or written. The terms and conditions of this Agreement shall prevail over any pre-printed terms on any quotes, orders, purchase orders, or purchase order acknowledgements, and shall prevail over any other communications between the parties in relation to the Software. You may not assign this Agreement whether voluntarily, by operation of law, or otherwise without Licensor's prior written consent. Licensor may assign this Agreement at any time without notice. The failure of a party to claim a breach of any term of this Agreement shall not constitute a waiver of such breach or the right of such party to enforce any subsequent breach of such term. If any provision of this Agreement is held to be unenforceable or illegal, such decision shall not affect the validity or enforceability of such provisions under other circumstances or the remaining provisions of this Agreement and such remaining provisions shall be reformed only to the extent necessary to make them enforceable under such circumstances. This Agreement shall be governed by the laws of the Province of Ontario and the laws of Canada applicable therein. No choice or conflict of laws rules of any jurisdiction shall apply to this Agreement. You shall only be entitled to bring any action or proceeding arising out of or relating to this Agreement, the Epiphan Hardware Products, Software, Documentation or any services provided in respect to the Epiphan Hardware Products, Software and/or Documentation in a court in Ottawa, Ontario, Canada, and You consent to the jurisdiction of such courts for any such action or proceeding. You waive all rights that You may have or that may hereafter arise to contest the jurisdiction of such courts for any action or proceeding brought by You. You hereby waive any right You may have to request a jury trial with respect to any action brought by You in connection with this Agreement, the Epiphan Hardware Products or Software or any services provided in respect to the Epiphan Hardware Products or Software. The application of the United Nations Convention on Contracts for the International Sale of Goods to this Agreement is expressly excluded.

April 22, 2019

© 2006-2020. Epiphan Systems Inc. All Rights Reserved.

Environmental Information

The equipment that you bought has required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment. In order to avoid the dissemination of those substances in our environment and to diminish the pressure on the natural resources, we encourage you to use the appropriate take-back systems. Those systems will reuse or recycle most of the materials of your end life equipment in a sound way. The crossed-out wheeled bin symbol invites you to use those systems. If you need more information about collection, reuse and recycling systems, please contact your local or regional waste administration. You can also contact us for more information on the environmental performance of our products.

Important Safety Warnings

Model numbers covered by this document: ESP1500 and ESP1556

WARNING: This product has no user-serviceable parts and the battery used in this device is not replaceable. Do not attempt to disassemble. Return the device for service.

CAUTION, RISK OF ELECTRIC SHOCK: This device may have multiple AC power cords installed. All power sources shall be disconnected before servicing to avoid shock hazard.

ATTENTION: Cet appareil ne contient aucun composant pouvant être entretenu ou réparé par l'utilisateur. En cas de panne, retourner l'appareil pour réparation.

ATTENTION, RISQUE DE CHOC ÉLECTRIQUE: Cet appareil peut être équipé de multiples cordons d'alimentation en courant alternatif. Pour placer cet appareil hors tension, débrancher tous les cordons d'alimentation sans exception.

FCC Compliance Statement

47 CFR Section 2.1077 Compliance Information

Unique identifier: LiveScript

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation.

Responsible party (US contact):

Epiphan Video
459 Hamilton Avenue, Suite 301
Palo Alto, CA
94301, USA

www.Epiphan.com

FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Innovation, Science and Economic Development Canada:

This device complies with ICES-003 of the ISSED rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareil est conforme à la norme ISSED NBM-003 pour les appareils radio agréés. Son fonctionnement est sujet aux deux conditions suivantes:

- (1) Le dispositif ne doit pas produire de brouillage préjudiciable, et
- (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

CE Compliance Statement

Marking by the symbol **CE** indicates compliance of this device with the applicable directives of the European Community and meets or exceeds the following technical standards.

Directive 2014/30/EU - Electromagnetic Compatibility

Directive 2014/35/EU - Low Voltage Directive

Directive 2011/65/EU - RoHS, restriction of the use of certain hazardous substances in electrical and electronic equipment

Warning: Operation of this equipment is not intended for a residential environment and could cause radio interference.



Other Jurisdictional Issues

Epiphan makes no representation that its products or information in this document or its web site is appropriate or available for use in your jurisdiction. Those who choose to access the Epiphan web site or use Epiphan products do so on their own initiative and are responsible for compliance with local laws, if and to the extent local laws are applicable

Submissions to Epiphan and Affiliated Servers

Any information, including but not limited to remarks, suggestions, ideas, graphics, or other submissions, communicated to Epiphan through their Epiphan web site is the exclusive property of Epiphan. Epiphan is entitled to use any information submitted for any purpose, without restriction (except as stated in Epiphan's Privacy Statement) or compensation to the person sending the submission. The user acknowledges the originality of any submission communicated to Epiphan and accepts responsibility for its accuracy, appropriateness, and legality.

Third Parties and Links to Third-Party Web Sites

Mention of non-Epiphan Systems Inc. products or services on their website, or this document site is for informational purposes and does not constitute an endorsement or recommendation.

This document may contain links to non-Epiphan web sites. These links are provided to you as a convenience, and Epiphan is not responsible for the content of any linked web site. Any outside web site accessed from the Epiphan web site is independent from Epiphan, and Epiphan has no control over the content of that web site. In addition, a link to any non-Epiphan web site does not imply that Epiphan endorses or accepts any responsibility for the content or use of such a web site.

In no event shall any reference to any third party or third party product or service be construed as an approval or endorsement by Epiphan of that third party or of any product or service provided by a third party.

Miscellaneous

It is the user's responsibility to ascertain whether any information downloaded from the Epiphan web site or other websites is free of viruses, worms, trojan horses, or other items of a potentially destructive nature.

Enforcement of Terms and Conditions

These Terms and Conditions for use of this document and the associated Epiphan Product are governed and interpreted pursuant to the laws of the province of Ontario, Canada, notwithstanding any principles of conflicts of law.

All disputes arising out of or relating to these Terms and Conditions shall be finally resolved by arbitration conducted in the English language in Ottawa, Ontario, Canada under the commercial arbitration rules of the Canada. The parties shall appoint as sole arbitrator a retired judge who presided in the province of Ontario. The parties shall bear equally the cost of the arbitration (except that the prevailing party shall be entitled to an award of reasonable attorneys' fees incurred in connection with the arbitration in such an amount as may be determined by the arbitrator). All decisions of the arbitrator shall be final and binding on both parties and enforceable in any court of competent jurisdiction. Notwithstanding this, application may be made to any court for a judicial acceptance of the award or order of enforcement. Notwithstanding the foregoing, Epiphan shall be entitled to seek injunctive relief, security, or other equitable remedies from any court of competent jurisdiction.

If any part of these terms is unlawful, void, or unenforceable, that part will be deemed severable and will not affect the validity and enforceability of the remaining provisions. Epiphan may, at its sole discretion and without notice, revise these terms at any time by updating this posting.

Copyright © 2020 Epiphan Systems Inc.

All Rights Reserved.

